



SPYDER

INSTALLATION GUIDE: ALT-YD-CS03-LED-(ALL COLORS)


Tools Required

Phillips Screwdriver



Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.

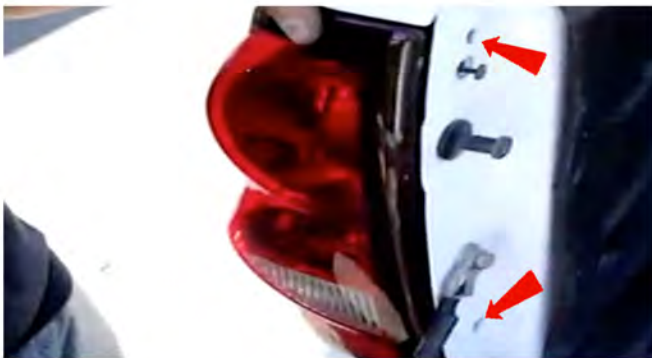

1) Open the tailgate. Remove the two phillips head screws securing the tail light.




2) Unseat the tail light. Remove all three bulb sockets from the OEM tail light housing and set it aside.



3) Remove the bulbs from the top two sockets of the OEM tail light harness. Make note of which side of the socket has the black ground wire.




4) Connect the SPYDER taillight's bulb socket insert harness into the corresponding brake lamp socket, being sure to align the black wire on the SPYDER side with the black wire on the OEM side of the taillight harness. Failure to match up ground wires can void your warranty.

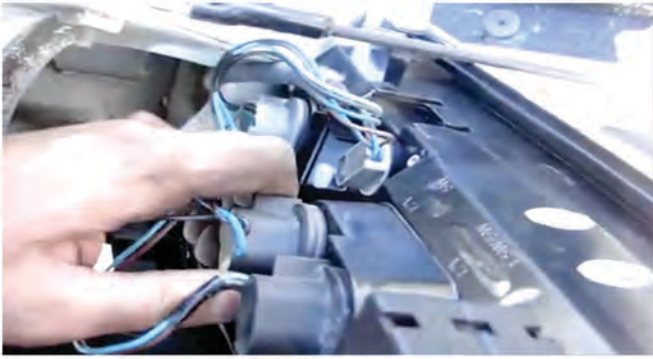

5) Reinstall the reverse lamp bulb and brake lamp bulb sockets into the SPYDER taillight housing. Be sure to twist the sockets securely into place.



6) Seat the SPYDER tail light.

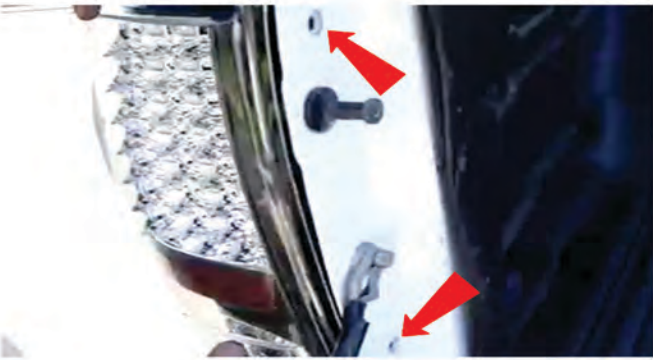

7) Reinstall the two phillips head screws that secure the tail lights.



8) Enjoy your SPYDER LED tail lights.