



Visors are designed to be placed inside the window channel.

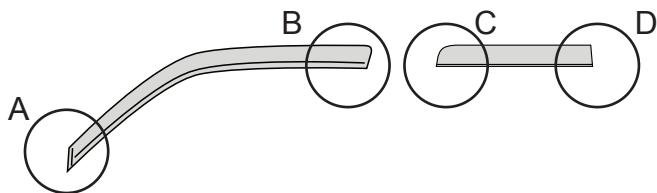


70°-100° F (Install temp.)


- ① Roll down window. Buff the inside felt surface with Scotch Brite pad. Then clean with alcohol pad.
- ② Remove the tape from the front and rear flanges. Peel back 2" of tape liner from each end of top flange.
- ③ Slide the front end flange of the visor into position **outside** the window channel **between rubber trim and mirror cap**. Then rotate visor up and slide top and rear flanges **inside** the window channel. **NOTE:** Proper placement is important to prevent window from breaking flange during operation.
- ④ Press the exposed area of tape against the surface and verify position.
- ⑤ With the visor in final position, remove the remainder of the tape liner by pulling on free ends.
- ⑥ Apply pressure along the inside of window channel and flange edges to secure in place.
- ⑦ Roll up window and leave window up for 24 hours to ensure proper adhesion.
- ⑧ The drivers side rear visor attaches to the felt surface following the same procedure.

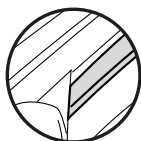


A

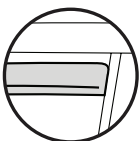

B

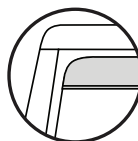

C

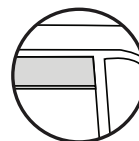

D

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.