


This product is designed to be placed on the trim surface of the door.

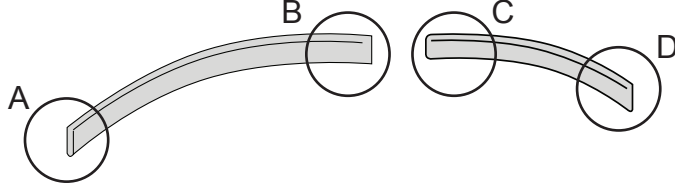

70°-100° F (Install temp.)

- 1 Clean outside of door trim and mirror cap where visor will attach with alcohol pad. (If Scotch Brite pad included, scuff rubber trim first.)
- 2 Remove tape liner from the rear flange. Peel back 2" of tape liner from each end of top flange.
- 3 Align visor with previously cleaned trim.
- 4 Slide front end flange under the mirror cap. Carefully use a putty knife or loosen cap to create a gap if needed.
- 5 With deflector in final position, remove tape liner by pulling on free ends. Apply pressure to top and rear flanges to secure.
- 6 The rear visor attaches with the same preparation methods as the front visor.



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.