


1. Open hood.
2. Install bracket on hood shield flange using machine screw and black washer.
3. Align holes in hood shield with holes in hood in order to center part in place. Note the location where the bracket will align with hood edge and mark with a grease pencil. Remove hood shield.
4. Center protective film over grease pencil mark, and wrap around the hood edge.
5. Position hood shield back in place on hood. Ensure that the holes in hood shield are properly aligned with the holes in the hood and that the bracket aligns with the protective film.
6. Insert (1) fastener through the hood shield and into the hood and securely tighten. Repeat for remaining (2) fasteners.
7. Insert self tapping screw with washer through the hood shield and into the hood. Securely tighten.
8. Slide bracket over hood edge, ensuring that it is centered on the protective film previously installed in **Step 4**.
9. Close hood and Install bump ons at pre-cleaned locations on the painted hood surface.

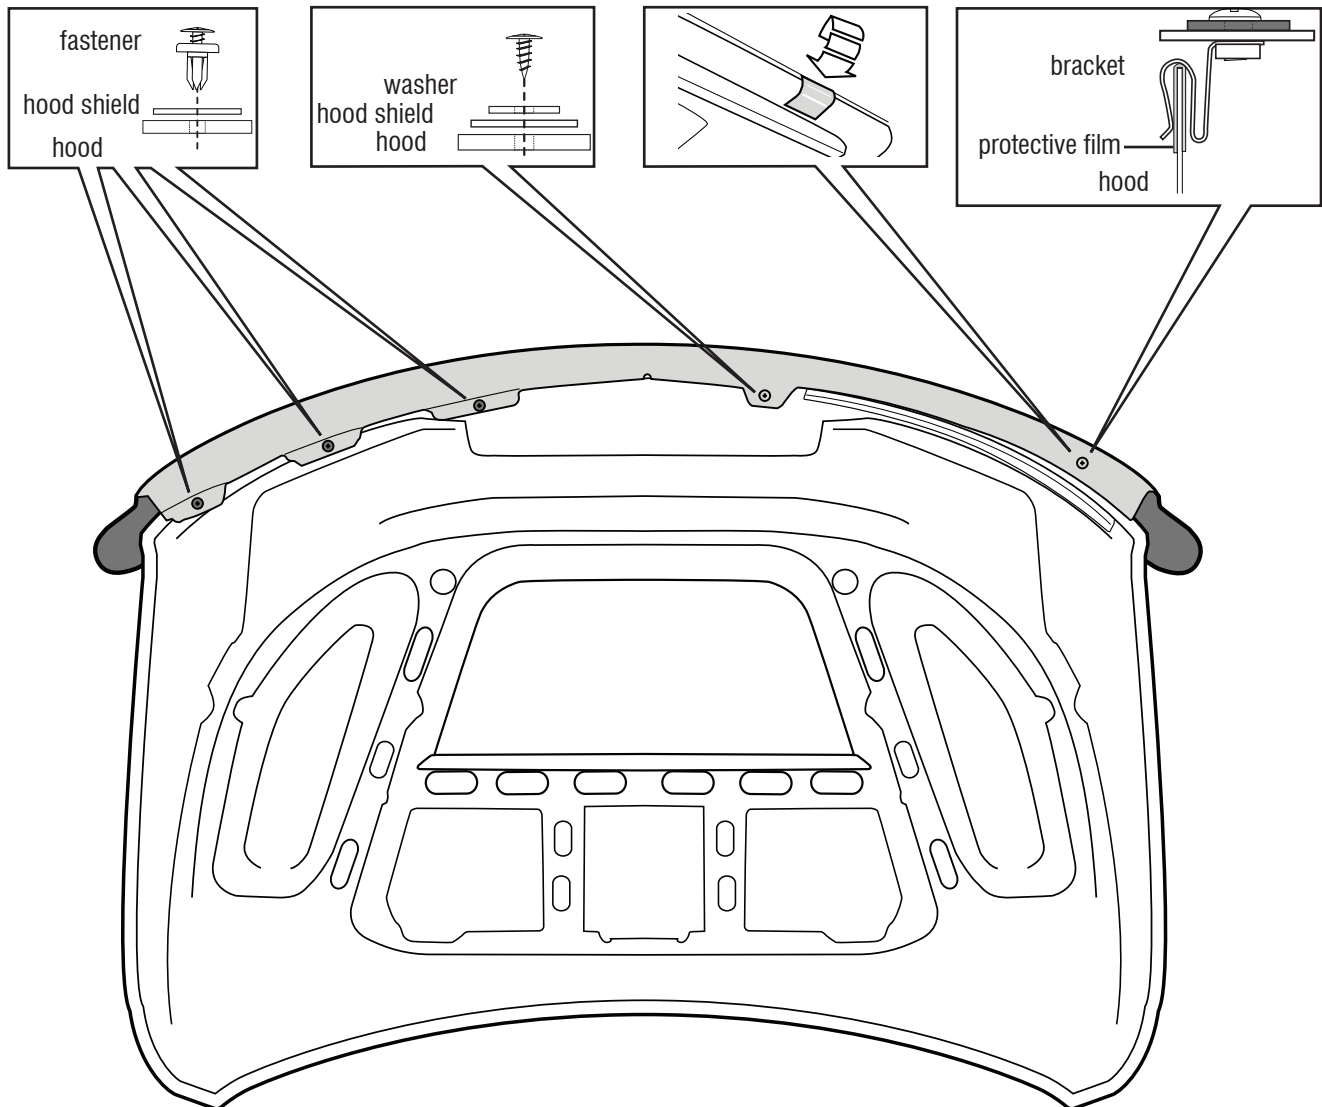

**IMPORTANT:** Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.