


1. Open Hood. Clean mounting surface of hood with an alcohol pad.
2. Expose 2" (5 cm) of tape liner from each end of the flanges on the hood shield.
3. Center part on front edge of hood and align holes.
4. Install (2) fasteners in the INBOARD holes.
5. Remove remaining tape liner on OUTBOARD flanges by pulling on exposed ends. Apply pressure to outboard flanges to ensure tape adhesion.
6. Install (2) self tapping screws through the OUTBOARD holes on hood shield. Use caution not to push too hard on self tapping screw and puncture outer hood surface!
7. Close Hood.
8. Apply bump ons to surface of hood.

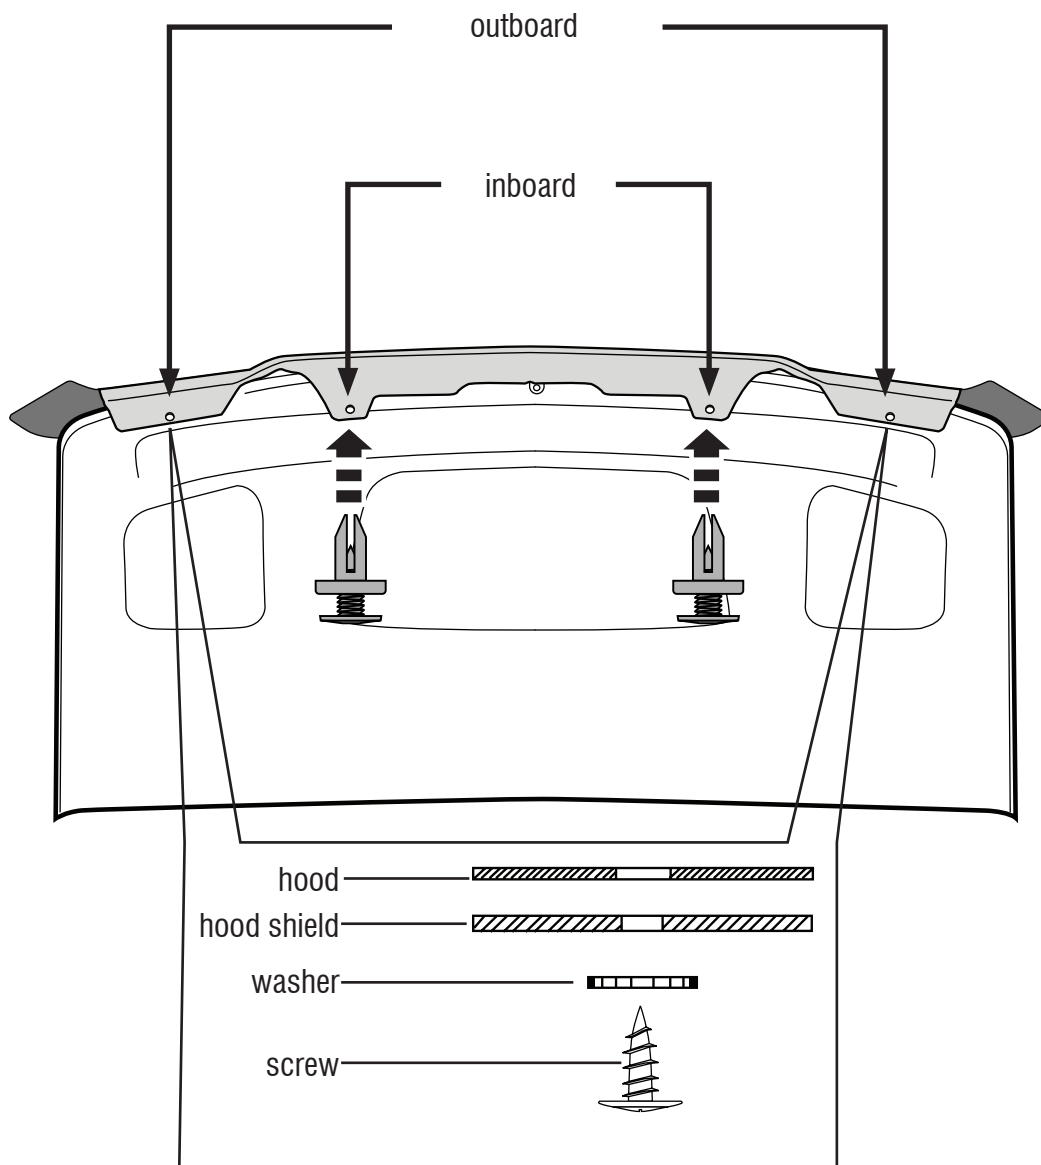

**IMPORTANT:** Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.