


STANDARD | universal trunk lock

For most General Motors cars with lock on deck lid. Completely assembled, ready to install. Retainer clip fits up and down.

Installation Instructions

Remove old lock by simply removing clip. Note direction of clip installation before removing. Prior to fastening lock in place check that shaft mates freely with slot in lock mechanism. This is done by holding lock in place in hole and turning key. The new shaft may

need to be cut to length and/or bent to mate properly. In many cases you can use the old shaft. If you wish to either use the old shaft or modify the new one, simply unhook the shaft from the lock—replace or modify, and rehook in place. Install new lock using new clip and gasket.

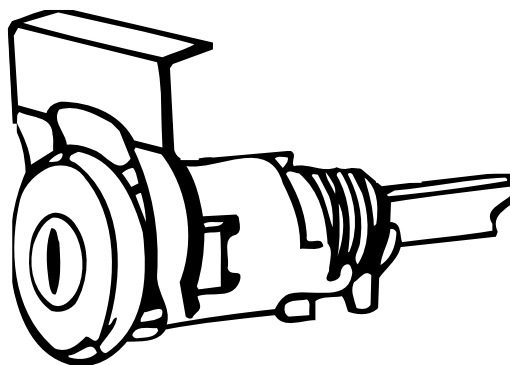

Completely assembled, ready to install. Retainer clip fits up and down as illustrated. Fits on the trunk lid, not on the body.