

INSTALLATION INSTRUCTIONS

TAILLIGHT GUARD

94-01 DODGE RAM 1500 / 94-02 DODGE RAM 2500/3500 PART # 32020

PARTS LIST:

1	Driver/Left Taillight Guard	6	ST4 x 20mm Sheet Metal Screws
1	Passenger/Driver Taillight Guard	6	4mm ID x 9mm OD x 1mm Flat Washers


PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
- 2. Open the tailgate and position the driver Taillight Guard over taillight housing. Center and align the Taillight Guard; then use the holes on the mounting tabs as a template to mark the drilling location on the vehicle (Figure 1).
- 3. Remove the Taillight Guard and set aside.
- **4.** Center punch the marked locations, then use a 1/8" drill bit to drill the marked locations (**Figure 2**). **IMPORTANT:** Any cutting tool may break or shatter. Government regulations require safety glasses & equipment at all times when drilling.
- **5.** Reposition the Taillight Guard back onto the taillight housing. Align the previously drilled holes with holes on the mounting tabs.
- **6.** Attach Taillight Guard to vehicle using the included (3) ST4 x 20mm Sheet Metal Screws and (3) 6mm Flat Washers (Figure 3). Tighten screws all the way. **NOTE**: *Do not over tighten screws or a pull out may occur.*
- 7. Repeat steps 2-6 for passenger side Taillight Guard.
- 8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish. **For stainless steel**: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

(Driver Side Installation Shown)

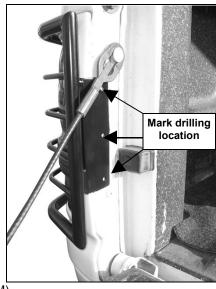

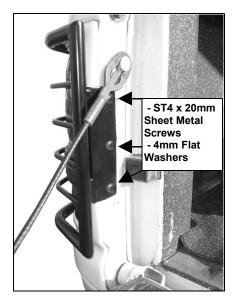



(AM)