


**3" SIDEBARS BODY BOLT MOUNT  
1988-98 C/K REGULAR CAB  
92-99 TAHOE/YUKON 2-DOOR  
92-94 BLAZER/JIMMY (FULL SIZE)**

**PARTS LIST:**

1	Driver/Left Side Bar	4	1/2" x 2" Hex Bolts
1	Passenger/Right Side Bar	4	1/2" x 1-1/2" OD x 1/8" Flat Washers
1	Driver/Left Front Mounting Bracket	4	1/2" Lock Washers
1	Passenger/Right Front Mounting Bracket	4	12-1.75mm x 120mm x 30mm Hex Bolts
1	Driver/Left Rear Mounting Bracket	4	12mm x 37mm x 3mm Flat Washers
1	Passenger/Right Rear Mounting Bracket	4	12mm Lock Washers

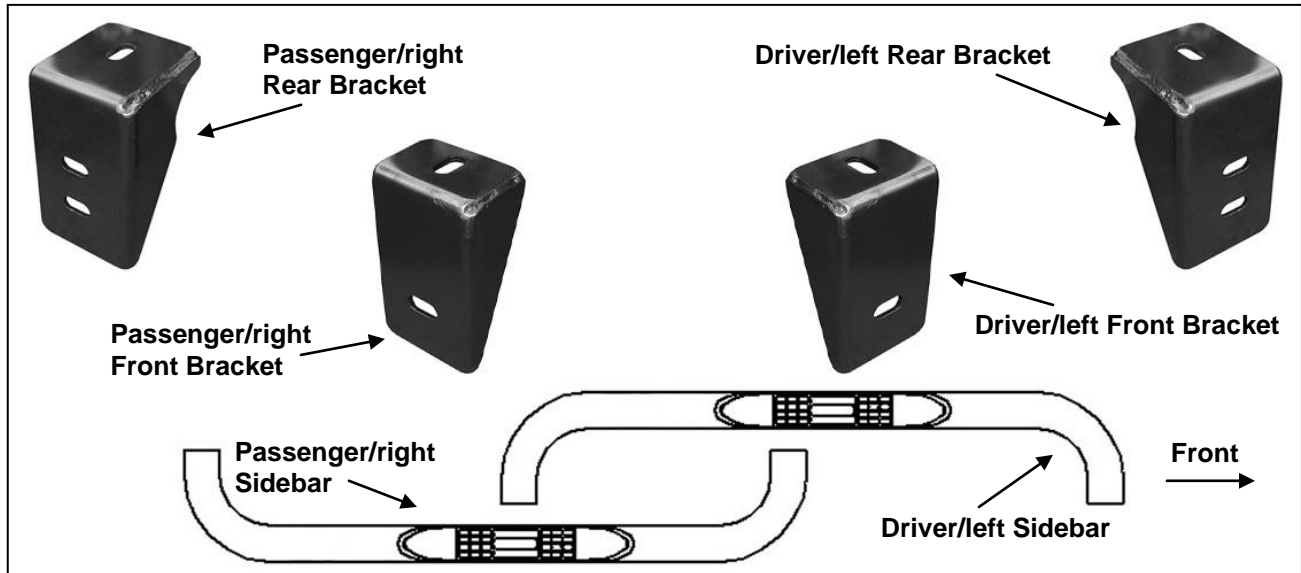

**PROCEDURE:**

**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTALLATION INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**

1. Start installation on the front, driver side of the vehicle. Remove the factory front body mount bolt.
2. Select the driver side front Mounting Bracket. Use the included (1) 12mm x 120mm Hex Bolt, (1) 12mm Lock Washer and (1) 12mm Flat Washer to attach the Bracket to the body mount. Leave hardware loose at this time. **IMPORTANT! To prevent unnecessary noise, adjust the position of all Mounting Brackets so that once tightened, the Mounting Brackets cannot come in contact with the factory steel body mount bracket.**
3. Move toward the rear of the vehicle. Remove the factory body mount bolt as described in **Step 1**. Select the driver side Rear Mounting Bracket. Bolt the rear Mounting Bracket in place as previously described in **Step 2**.
4. With assistance, position the Sidebar up to the front and rear Mounting Brackets. **IMPORTANT:** There are two slots in the rear Mounting Bracket. Select the appropriate mounting position to level the Sidebar with the pinch weld on the vehicle. Attach the Sidebar to the Brackets with the included (2) 1/2" x 2" Hex Bolts, (2) 1/2" Lock Washers and (2) 1/2" Flat Washers. Do not tighten hardware at this time.
5. Level and adjust the Sidebar, tighten all hardware and check all mounting locations for clearance between factory steel body mount brackets and Mounting Brackets. Once satisfied with fit, tighten all hardware.
6. Repeat **Steps 1—5** for passenger Sidebar installation.
7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**3" SIDEBARS BODY BOLT MOUNT  
1988-98 C/K REGULAR CAB  
92-99 TAHOE/YUKON 2-DOOR  
92-94 BLAZER/JIMMY (FULL SIZE)**

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.

**Driver side installation illustrated**

