
INSTALLATION INSTRUCTIONS SIDEBAR 05-12 NISSAN X-TERRA PART NUMBER

PARTS LIST:

1	Driver/Left Sidebar	12	12-1.75mm x 30mm Hex Head Bolts	
1	Passenger/Right Sidebar	12	12mm Lock Washers	
3	Driver/Left Side Mounting Bracket	12	12mm Hex Nuts	
3	Passenger/Right Side Mounting Bracket	24	12mm ID x 29mm OD x 3mm Flat Washers	
3	Driver/Left Sidebar Bracket	12	8-1.25mm x 25mm Hex Head Bolts	
3	Passenger/Right Sidebar Bracket	12	8mm Lock Washers	
		24	8mm ID x 22mm OD x 2mm Flat Washers	
		12	8mm Nylock Nuts	







Passenger Side Mounting Bracket 3 pcs




Passenger Sidebar Bracket – 3 pcs

	Passenger Sidebar
	Driver Sidebar

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
- 2. From underneath of vehicle, locate the six factory threaded studs on the side panel of the vehicle. Partially attach all three passenger side panel Mounting Brackets to the factory threaded studs using the included (6) 8mm Flat Washers and (6) 8mm Nylock Nuts as shown in figure below. **NOTE:** Mounting tabs on the brackets should be facing the rear of the vehicle.
- Proceed to attach all three Sidebar Brackets to the back side of Side Panel Brackets, so that the cradles on the Sidebar Brackets are facing the rear of the vehicle. Use the included (6) 12mm x 30mm Hex Head Bolts, (6) 12mm Nylock Nuts, and (12) 12mm Flat Washers to attach them together as shown in figure below. Do not tighten at this time.
- 4. Once all three Sidebar Mounting Brackets are partially installed, place passenger Sidebar onto Mounting Brackets. Secure Sidebar to Mounting Brackets using the included (6) 8mmx 25mm Hex Head Bolts, (6) 8mm Lock Washers, and (6) 8mm Flat Washers.
- 5. Level and adjust Sidebar; then tighten all hardware at this time.
- 6. Repeat steps 3-6 for driver Sidebar.
- 7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

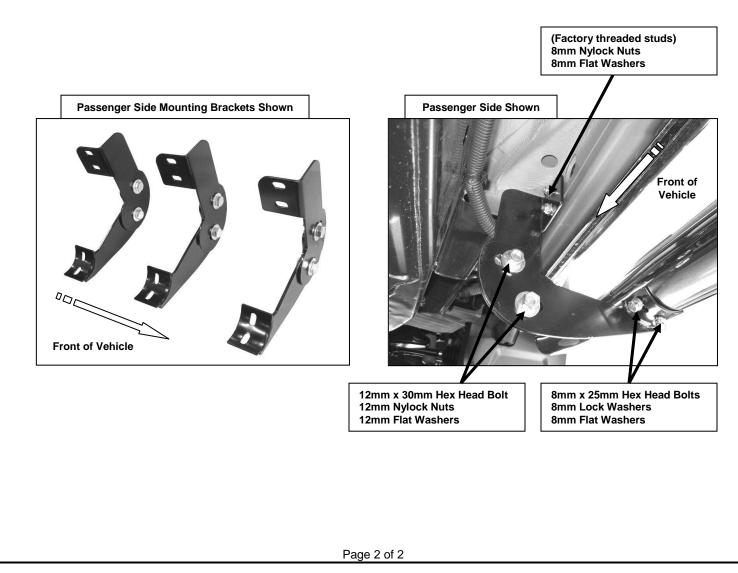

Find more Steelcraft products on our website.