
## NOTE:

- ⇒ Please read the instruction completely for easy installation, which will also help you to avoid scratches or other
  potential damages to your appealing car.
- $\Rightarrow$  Please periodically check and retighten all the hardware and clean the investment for a refresh look.

No.	Name	Qty	Remarks	No.	Name	Qty	Remarks
1	Side bar	2		6	Flat washer	8	10mm
2	LF-mount bracket	1		0	Lock washer	8	10mm
3	LR-mount bracket	1		8	Hex bolt	12	M8×20
4	Right bracket	2		9	Flat washer	12	8mm
5	Hex bolt	8	M10×20	0	Lock washer	12	8mm

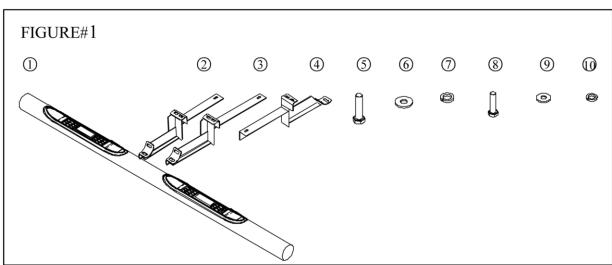



**TOOLS NEEDED:**  $1 \cdot \text{one } 17 \text{mm wrench} \qquad 2 \cdot \text{one } 14 \text{mm wrench}$ .


## **ASSEMBLY PROCEDURE:**

Step 1: Check all the contents are available in accordance with the above list and figure#1. (LR-bracket is longest)

Step 2: Mount brackets to vehicle frame (using existing holes) by using accessories ( ) as shown in figure #2.

**Step 3:** Install the side bars to the brackets using accessories (5) (6) (7), and adjust them to proper position, and then tighten all the hardware.

## 3"SIDEBARS 02-06 HONDA CRV

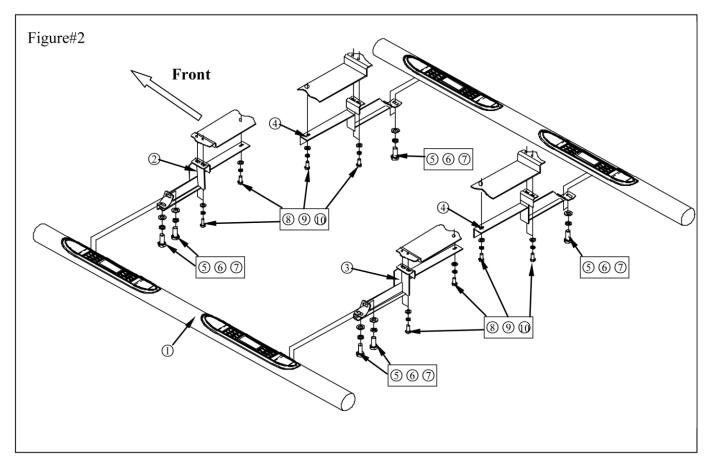

Step 4: Check all the parts are properly installed, and then you can enjoy the investment.

NOTE: Any damages and losses caused by improper installation and application, goes beyond our quality warranty.

Find more Steelcraft products on our website. Get in and out of your truck or SUV easier with running boards available on our website.