



INSTALLATION INSTRUCTIONS

Stillen Rockers

P/N: 108345

2008 NISSAN ALTIMA COUPE

Materials supplied:

1. (2) Rockers
2. (2) #4 X 1/2" Self-Tapping Screw
3. (4) #6 x 1/2" Self-Tapping Screw
4. (2) #6 x 3/4" Self-Tapping Screw
5. 7' Double-sided tape

Equipment needed:

1. Sandpaper/Schotchbrite
2. Drill & Assorted Drill bits
3. Adhesive Promoter (optional)



WARNING:

IF YOU ARE NOT EXPERIENCED IN THE AREA OF BODY REPAIR WE STRONGLY URGE THAT YOU REFER THIS INSTALLATION TO YOUR BODY SHOP.

NOTE: Preparation of the urethane surfaces to be painted is important to achieve proper fit and finish. However, these components are flexible and attention should be paid to the type of paint chosen for these applications.

NOTES ABOUT INSTALLATION, CLEANING, AND PAINTING

Pre-fit all pieces to the vehicle. Once you are assured that you have the right aero kit you may proceed. If you don't, please call *Stillen* right away. We highly recommend using masking tape anywhere the aero kit may be touching the vehicle body to prevent scratches during the pre-fit. Do any sanding, filing, or spacing necessary (before painting) for a clean tight fit. Spending the extra time now will assure you of a perfect "factory" installation.

PAINTING URETHANE

Urethane components require a special cleaning and painting procedure to obtain a proper finish. Once the urethane components have been properly pre-fitted **CLEAN AND SCRUB THEM!**

Using plenty of hot water, plenty of scouring powder (like AJAX[®] or COMET[®]) and a #7447 Scotch Brite[®] pad. Scrub each piece thoroughly until there are no shiny spots. Scrub all surfaces especially the backside top sections that will be against the body. You will be applying double sided tape to this area so **clean and sand it!** The goal is to achieve an even dull finish on all surfaces to be painted. After you've finished scrubbing the parts completely repeat the procedure one more time. If this is not done properly the paint will not stick!


Any automotive primer will provide excellent adhesion to the part if the surface is properly prepared, however, **we do not recommend using lacquer primer on urethane components due to its rigidity.** Elastomeric or acrylic primers can be used but elastomeric primers, due to the flex agent added, are preferred over acrylic primers. Light sanding is recommended after primer has dried and before final color painting.

On all the *Stillen* urethane components, the preferred procedures are:

- A. Pre-fit, sand, and shape.
- B. Paint
- C. Install

INSTALL

1. First you will need to remove the stock rockers by removing the clips on the underside of the rockers as well as the ones on both ends. Once all the clips are removed you can slide the rocker forward in order to remove it. **NOTE: Some clips may break in the process, these will not be reused.**

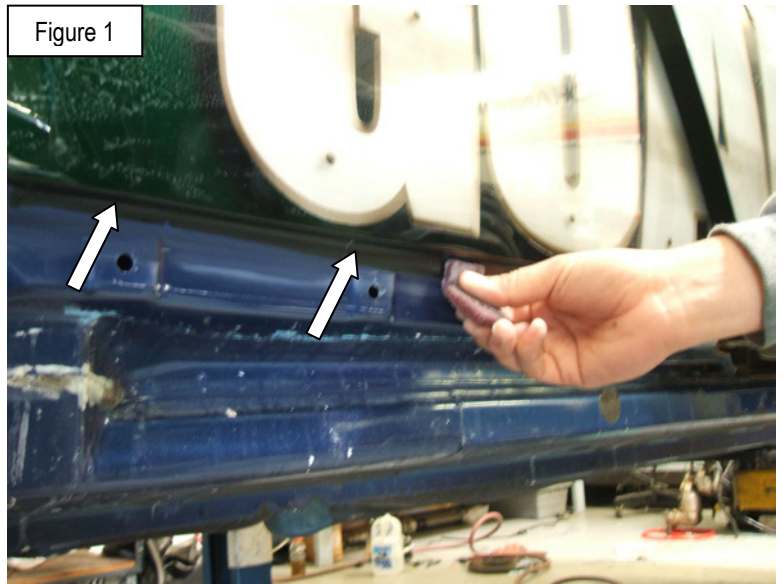

2. After the rockers are prepped and painted, double-sided tape should be applied to the indentation on the inside of the rockers. This surface has to be CLEAN and DRY for the tape to properly adhere. A residual-free cleaner is recommended (e.g. Wurth™ Clean-Solve) to prepare the surface.

The surface of the vehicle should also be prepped and cleaned for proper adhesion.




(Fig.1&2)

For BEST results after cleaning,

use of an adhesion promoter such as 3M™ part #06396 should be applied to wherever tape will be used. When applying tape, make sure that tape is smooth and wrinkle free.

3. After applying the tape, pull back approximately 1 inch of protective covering from the tape on each end. Make sure the film is sticking out.

(Fig.3) Place the rocker GENTLY on the vehicle and make sure you have it positioned correctly. If adhesion promoter was used you will NOT get a second chance! While holding it in position, pull the tabs you created while applying light downward pressure.

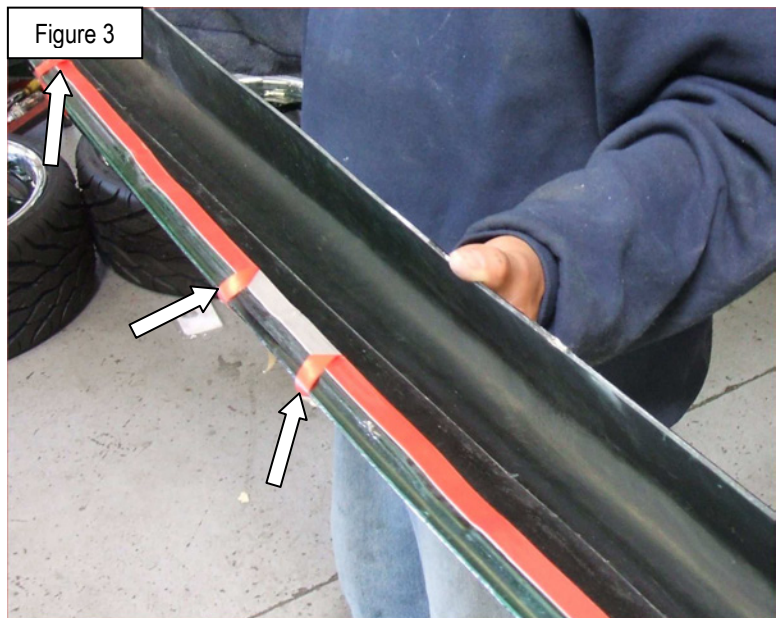

Continue this taking care not to tear off the tabs by pulling to hard. After all the film is removed, apply firm pressure all around to

insure the tape has bonded properly.

4. You will need to drill 4 small pilot holes onto the rockers for extra security. See **(Fig.4, Fig.5, Fig.6)**
5. Next you will be using the supplied hardware as followed: Use 1 #6 by 1/2" long screw as shown in **(Fig.4)** Use the #4 by 1/2" long screw as shown in **(Fig.5)** Next you will be using the 1 #6 x 1/2" long screw in the top location in **(Fig.6)** Lastly you will be using the #6 by 3/4" long screw in the bottom location shown in **(Fig.6)**
6. Done! Enjoy the looks of your new *Stilen* rockers.

