



INSTALLATION INSTRUCTIONS
STILLEN FRONT & REAR SWAY BAR
Hyundai Genesis
P/N 304390

Materials supplied:

1. (1) Front Sway Bar
2. (1) Rear Sway bar
3. (1) Bushing Kit

Equipment needed:

1. Assorted sockets and wrenches



WARNING:

**IF YOU ARE NOT EXPERIENCED IN THE AREA OF
AUTOMOTIVE MECHANICS WE STRONGLY URGE THAT
YOU REFER THIS INSTALLATION TO YOUR MECHANIC.**

Front Installation:


1. Lay the sway bar on floor and check that it is the correct one.
2. Park the vehicle on a smooth level asphalt or concrete surface and set the parking brake firmly. Place a block in front of and behind the front wheels. Jack up the rear of the vehicle and place on jack stands under the frame in the manufactures specified locations. Alternatively, lift the vehicle on a hoist.

Warning: do not work under a vehicle being held up by a jack only. Place jack stand securely under the vehicle in the manufacture specified location.

Note: Take note the way the OEM bar is installed to ensure the STILLEN bar is not installed upside down.

3. Remove the 2 nuts attaching the sway bar to the end links. Remove the 4 bolts from the "D" clamps and remove the sway bar.
4. Install the STILLEN rear sway bar in the reverse manner as removed.
5. Check that all hardware is fastened properly and lower vehicle back to the ground.

Your installation is now complete.

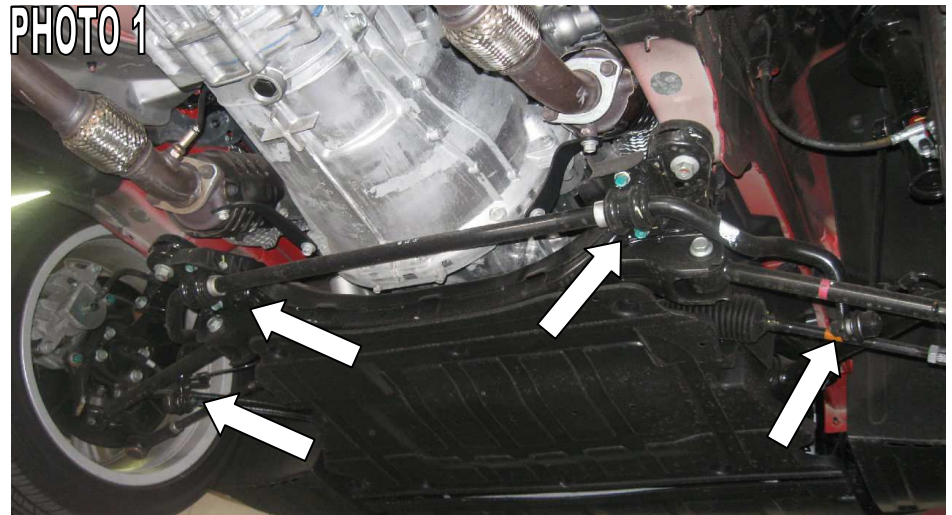



Rear Installation:

1. Lay the sway bar on floor and check that it is the correct one.
2. Park the vehicle on a smooth level asphalt or concrete surface and set the parking brake firmly. Place a block in front of and behind the front wheels. Jack up the rear of the vehicle and place on jack stands under the frame in the manufactures specified locations. Alternatively, lift the vehicle on a hoist.

Warning: do not work under a vehicle being held up by a jack only. Place jack stand securely under the vehicle in the manufacture specified location.

Note: Take note the way the OEM bar is installed to ensure the STILLEN bar is not installed upside down.

3. Remove the 2 nuts attaching the sway bar to the end links. Remove the 4 bolts from the "D" clamps and remove the sway bar.
4. Install the STILLEN rear sway bar in the reverse manner as removed.
5. Check that all hardware is fastened properly and lower vehicle back to the ground.

Your installation is now complete.

PHOTO 1



PHOTO 2

