



INSTALLATION INSTRUCTIONS
STILLEN POWER STEERING COOLER
08 INFINITI G37 / 09 370Z
P/N 400736

Materials supplied:

1. 1 ea.- Power steering cooler & bracket assembly
2. 1 ea.- Hose Kit
3. 3 ea.- 11" tie wrap
4. 4 ea.- M6 Bolts
5. 4 ea.- M6 Nuts
6. 2 ea.- Small hose clamps



Equipment / Supplies required:

1. METRIC assorted sockets and wrenches
2. +,- Screwdriver & Assorted pliers
3. Floor jack & Safety stands



WARNING:
IF YOU ARE NOT EXPERIENCED IN THE
AREA OF AUTOMOTIVE MECHANICS WE
STRONGLY URGE THAT YOU REFER THIS
INSTALLATION TO YOUR MECHANIC.

1. First you will need to remove numerous plastic clips and bolts on the forward radiator cover (photo 1). Underneath the radiator cover you will find the hood latch cable and a wire harness you will have to detach. Set the cover out of the way.
2. Remove Fascia. This will require removing the bolts from the lower engine cover. You will also have to remove the plastic clips from the front wheel well liners to reach the bolts under very end of the fascia. Under the rubber flaps in photo 3, (circled) you will find another set of bolts and mounting brackets. After removing all the hardware, firmly pull the fascia out of the clips around the headlights and pull the fascia away from the vehicle. Set out of the way.
3. Remove foam fascia support piece by pulling it straight forward. Set out of the way.
4. You will be disconnecting the 2 soft lines shown in (photo 2) This is where you will be connecting the supplied lines for the new power steering cooler.

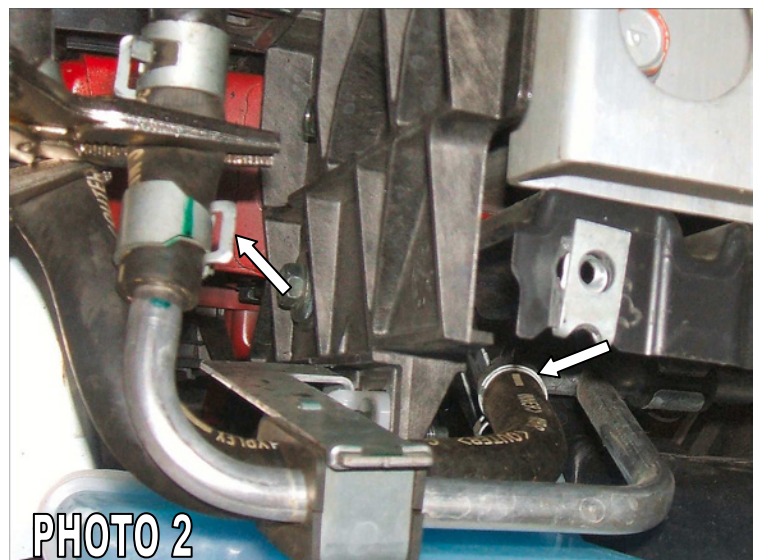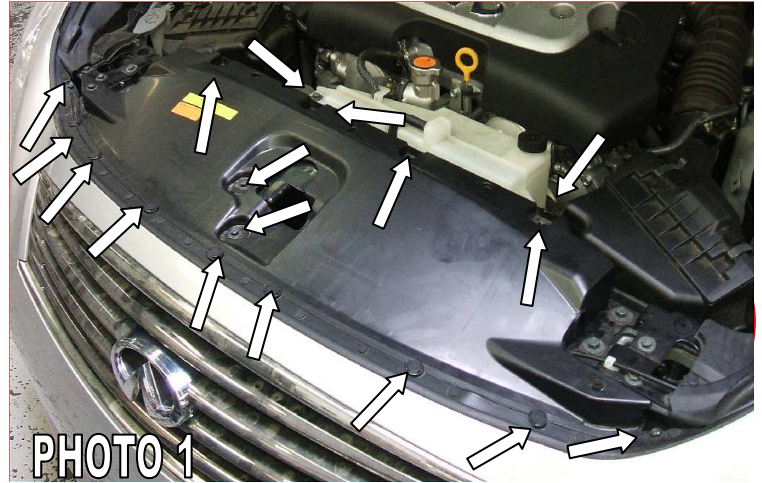

5. You will need to remove the stock cooler at this time. See (photo 3)
6. You will route the lines through the existing hole in the plastic panel as shown in (photo 4) **NOTE: If you are also installing a Stillen oil cooler you will need to enlarge this hole to accommodate this line as well.**
7. Mount the cooler and bracket assembly reusing the stock bolts you previously removed. See (photo 3)
8. Double check all the fittings for leaks and make sure everything is tight and secure.
9. Reinstall your front fascia in the reverse order that it was removed.
10. Done!! Enjoy the benefits of your new power steering cooler.

