



INSTALLATION INSTRUCTIONS
NEAR CAT-BACK EXHAUST
P/N 504437
2011 INFINITI M37

Materials supplied:

1. (1) NEAR CAT-BACK EXHAUST
2. (4) HHCS M10x1.25
5. (4) M10x1.25 Nuts
6. (2) 2.25" Muffler Clamp
7. (1) Gasket Y-Pipe
8. (2) Gasket

Tools/Materials required:

1. Assorted sockets and wrenches
2. Spray lubricant



WARNING:

IF YOU ARE NOT EXPERIENCED IN THIS TYPE OF AUTOMOTIVE MECHANICS WE STRONGLY URGE THAT YOU REFER THIS INSTALLATION TO YOUR MECHANIC.


Installation:

1. Begin by raising the rear of the vehicle and supporting it on jack stands.

CAUTION: Never work under a vehicle supported with a jack only!

NOTE: Before unbolting the OEM system, check the tips for alignment. If the factory system is not aligned correctly, then the new system may also be misaligned when complete.

2. Spray all the hangers and nuts with penetrating lubricant.
3. Unbolt the flange at the y-pipe. See **(Photo1)**
4. Unbolt the muffler flange. See **(Photo2)**
5. Remove the midpipe.
6. Remove the exhaust muffler.

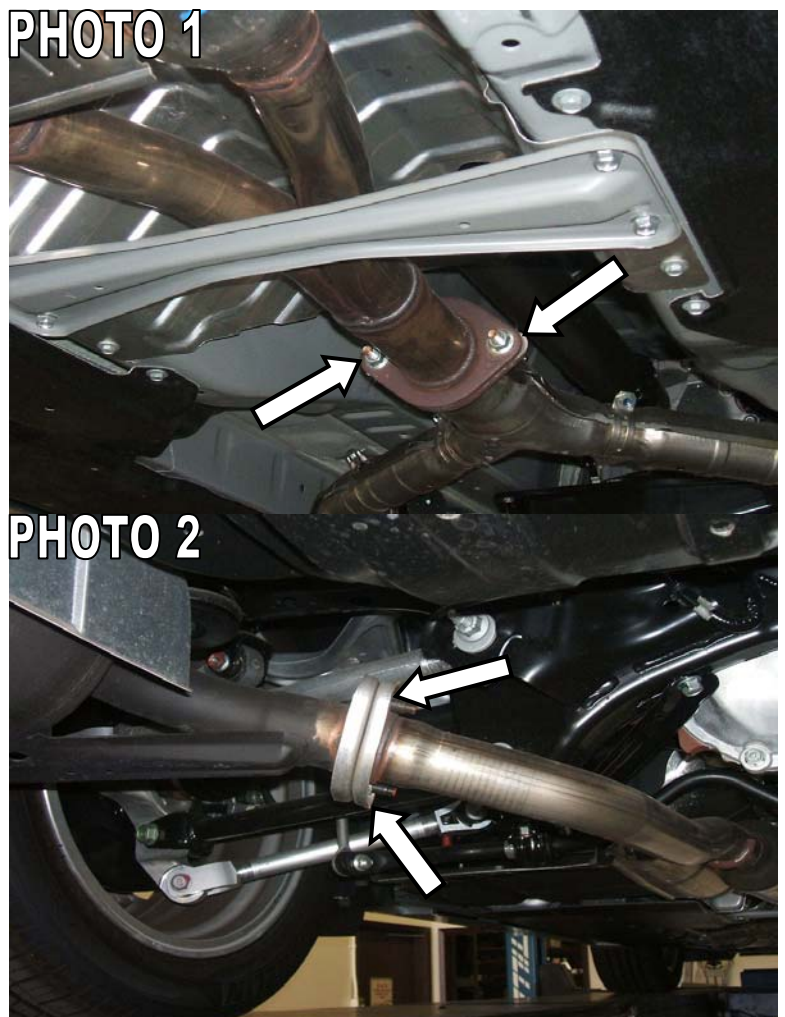

7. Using the supplied gaskets, nuts, bolts, and exhaust clamps, reinstall the midpipe and mufflers as previously removed. See **(Photo3)** Your install should look as shown when complete.
8. Start vehicle and check for leaks.
9. Done!! Enjoy your new *STILLEN* Near Cat-Back Exhaust.

