



INSTALLATION INSTRUCTIONS
REAR SECTION EXHAUST
P/N 508190
2011 NISSAN JUKE

Materials supplied:

1. (1) Rear section exhaust
2. (2) Hhcs Long
3. (2) Nuts
4. (1) Hhcs Short

Tools/Materials required:

1. Assorted sockets and wrenches
2. Spray lubricant



WARNING:

IF YOU ARE NOT EXPERIENCED IN THIS TYPE OF
AUTOMOTIVE MECHANICS WE STRONGLY URGE THAT
YOU REFER THIS INSTALLATION TO YOUR MECHANIC.

Installation:

1. Begin by raising the rear of the vehicle and supporting it on jack stands.


CAUTION: Never work under a vehicle supported with a jack only!

NOTE: Before unbolting the OEM system, check the tips for alignment. If the factory system is not aligned correctly, then the new system may also be misaligned when complete.

2. Spray all the hangers and nuts with penetrating lubricant.
3. Unbolt the muffler flange. See **(Photo1)**
4. Remove the exhaust.
5. Transfer 2 of the hangers from the OEM muffler to the STILLEN muffler. See **(Photo1&2)**



6. Use the supplied bolt and bolt the exhaust hanger bracket as shown. **(Photo3)**
7. Done!! Enjoy your new STILLEN exhaust.
8. Start the vehicle and check for leaks.

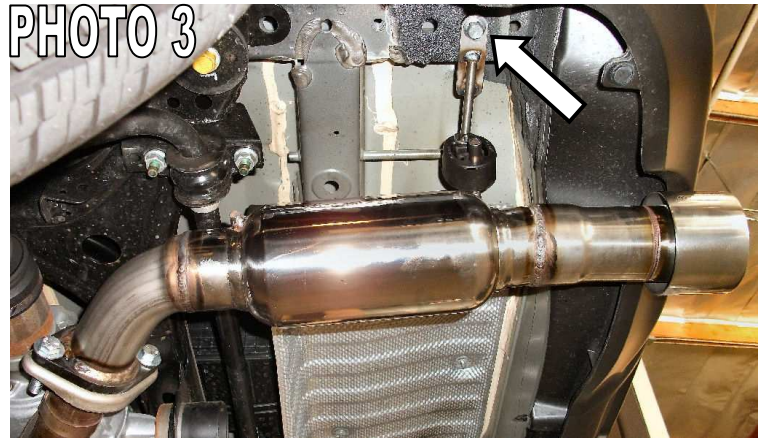

All rights reserved. No part of this publication may be reproduced, transcribed, transmitted, or translated into another language in any form, by any means without written permission of STEVE MILLEN SPORTPARTS, INC

Page 2 of 2

Learn more about [other performance exhaust systems](#) by [Stillen on our website.](#)