STREET SCENE EQUIPMENT, INC.



## 950-77146 SATIN FINISH & 950-78146 CHROME FINISH 2003 CHEVY SILVERADO OEM VALANCE <u>SPEED GRILLE INSERT</u>


## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

| PARTS LIST |                    |   |                     |   |                            |
|------------|--------------------|---|---------------------|---|----------------------------|
| 2 PC.      | Speed Grille Set   | 1 | Instruction Sheet   | 8 | Installation Clips # 71099 |
| 1          | Street Scene Decal | 1 | Street Scene Emblem | 1 | Care For Grilles           |

| TOOL LIST         |  |
|-------------------|--|
| NO TOOLS REQUIRED |  |

1. Install the Speed Grille into their openings in valance. Each Speed Grille is labeled for it's location. Refer to illustration and " clip " Speed Grille into valance using two clips on the bottom side and two clips on the top side.

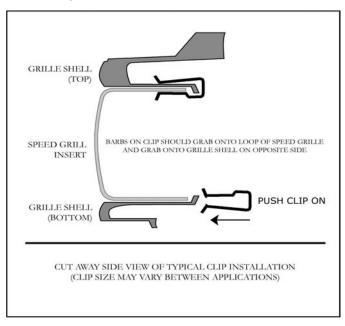

## **Typical Clip Installation**