



STREET SCENE EQUIPMENT, INC.

950-76192 BLACK CHROME
 950-78192 CHROME
 2006
 H-3 HUMMER
 MAIN GRILLE

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
7 PC	Speed Grille Set	1	Instruction Sheet	28	Installation Clips # 71098
		1	Street Scene Emblem		

TOOL LIST	
No Tools Required	

1. Remove the grille shell prior to installing speed grilles. Grille will " un-snap " from vehicle.
2. Install Speed Grille inserts one at a time into openings and clip to grille shell. Use four clips per insert, two on each side. Refer to the drawing below for a reference on installing the drawing below for a reference on installing the clips. Always install the clip with the " humped " side next to the Speed Grille.

TYPICAL CLIP INSTALLATION

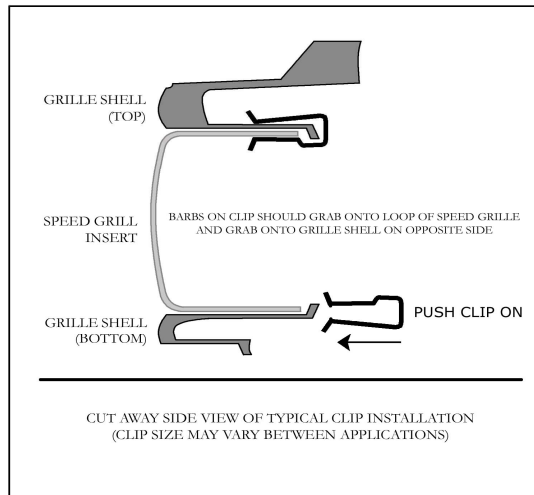

3. Install Grille Sheel back onto vehicle.