



STREET SCENE EQUIPMENT, INC.

950-76149 BLACK CHROME
 &
 950-77149 SATIN FINISH
 &
 950-78149 CHROME FINISH
 1994 - 2004
 S-10
 SS BUMPER COVER
 SPEED GRILLE INSERT

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	RT Speed Grille Insert	1	Instruction Sheet	16	Installation Clips # 71098
1	LT Speed Grille Insert	1	Street Scene Emblem		
1	Center Grille Grille Insert				

TOOL LIST

1. Speed Grilles are marked for their locations. Make sure to install as marked.
2. The Speed Grilles are secured to the bumper cover with the installation clips provided. Refer to the illustration below for clipping procedure.

TYPICAL CLIP INSTALLATION

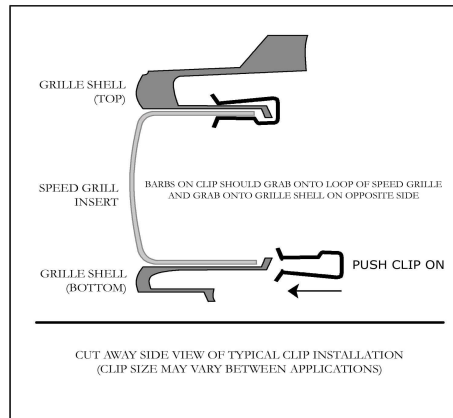

3. Use four clips on each of the side grilles. Use two on the top side and two on the bottom side. The center Speed Grille will require eight clips four on the top side and four on the bottom side. Install clips at each end and center the two others between.