



STREET SCENE EQUIPMENT, INC.

950-76184 BLACK CHROME
 950-77184 SATIN FINISH
 950-78184 CHROME FINISH
 950-79184 STAINLESS STEEL
 2007
 CHEVY SILVERADO HD
 SPEED GRILLE INSERTS

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Upper Speed Grille Insert		4	11" Ladder Ties	
1	Lower Speed Grille Insert		18	Installation Clips # 71092 Wide	
1	Instruction Sheet	1	Street Scene Emblem	1	Care For Grilles


TOOL LIST	
Flat Blade Screwdriver, Side Cut Pliers, 10MM Wrench, Panel Removal Tool	

1. Remove the radiator air deflector panel over the grille shell by removing the eight plastic retaining fasteners across the top.
2. Remove the complete grille shell from vehicle by removing the four fasteners on the top side.
3. Grasp the Grille Shell and pull to release the six snap in fasteners securing the grille shell to vehicle. If the metal fasteners are retained in vehicle remove and re-install on grille shell before re-assemble.
4. Set the Speed Grille inserts over the grids in grille shell. Attach the lower Speed Grille to the grille shell using six installation clips on the top and bottom sides. Clip close to each end and to the right and left of bow tie and equally spaced between. The photo below will aid in installing the clips.

PHOTO 1

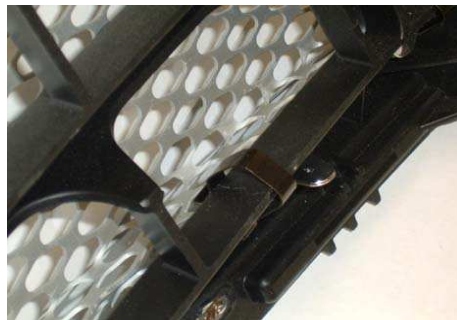

5. Attach the upper Speed Grille insert to the grille shell using six installation clips on the bottom side spaced like the lower. The top side of the upper Speed Grille will attach using the four ladder ties provided. Insert the tie thru the loop in Speed Grille and around the plastic grid on grille shell. Install a tie at each end and center the remaining two between.

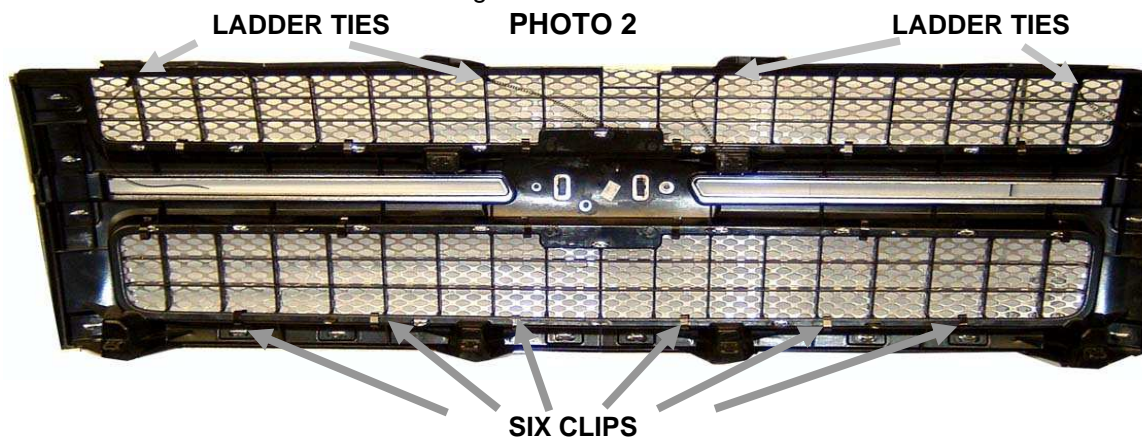

6. Install the grille shell back into vehicle. Make sure to align all six fasteners with the slots on vehicle before snapping into place. Install the four bolts across the top.
7. Install the cover panel using the original fasteners.