



# STREET SCENE EQUIPMENT, INC.

**950-77242 SATIN FINISH**  
**950-78242 CHROME FINISH**  
**2005 - 2006**  
**CHEVY COLORADO**  
**EXTREME**  
BUMPER COVER  
SPEED GRILLE INSERT

## INSTALLATION INSTRUCTIONS


**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
<b>3 PC.</b>	Speed Grille Set	<b>1</b>	Instruction Sheet	<b>6</b>	Installation Clips # 71098
<b>8</b>	11" Ladder Ties	<b>1</b>	Street Scene Emblem	<b>1</b>	Care For Grilles

TOOL LIST
Drill Motor, 7/32" Drill Bit, Side Cut Pliers

1. Remove all Speed Grille inserts from packages and identify location.
2. Install the center Speed Grille into opening from the front side. Fasten from the backside to bumper cover using three clips along the top side and three clips along the bottom side. See illustration below.

### TYPICAL CLIP INSTALLATION

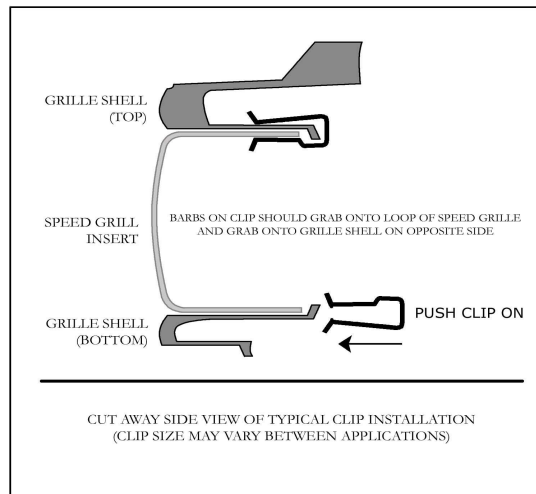

3. The side Speed Grilles will have to be installed with the tie straps. Drill two holes per tie strap 1/2" apart. Run the tie strap around the loop in the Speed Grille ( where not visible from front ) and into drilled holes. Install all straps, pull tight, cut off excess.