



INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Upper Speed Grille	1	Grille Care Instruction	2	# 8 X 3/4 Washerhead Screws Silver
1	Lower Speed Grille	1	Street Scene Emblem	2	# 10 Washerhead Screws Black
2	" L " Brackets			8	Installation Clips # 71098 3/4" Long
2	Flat Washers			4	Installation Clips # 71090 2" Long
				1	Instructions Sheet W / Template

TOOL LIST
Drill Motor, 1/8" Drill Bit, Scissors, Phillips Screwdriver

1. Open hood, cut out drill template and place on grille. Refer to illustration I for placement. Drill two 1/8" holes where marked. Install the two " L " brackets with the threaded side up using the black screws.

ILLUSTRATION I

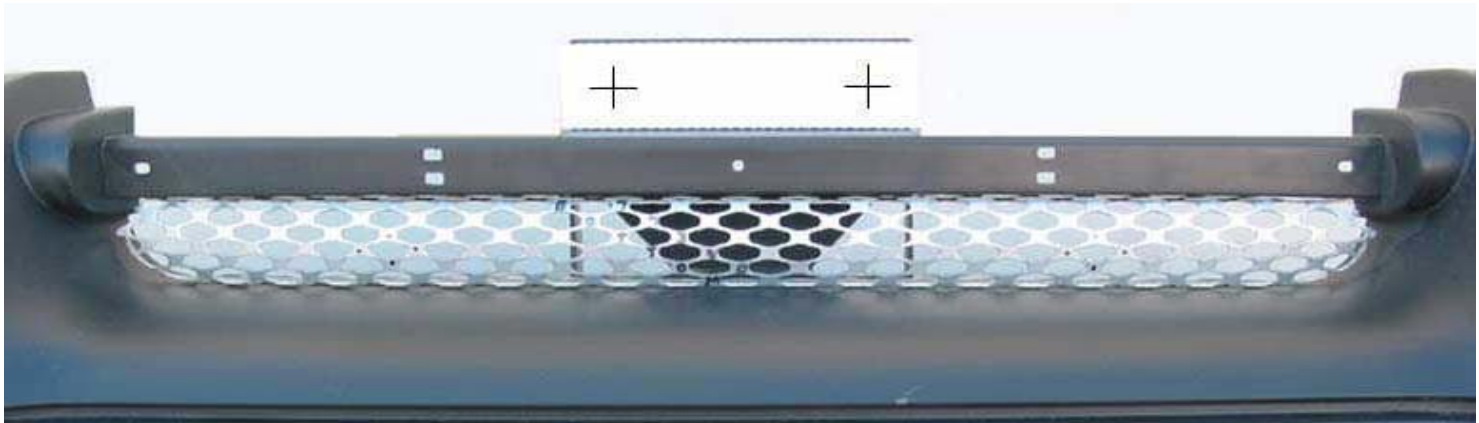

2. Install the lower grille into the opening. Fasten the bottom side using four of the two inch long PN 71090 clips. Fasten the top side using four of the PN 71098 Clips. Clip at each end and to the right and left of the center solid piece.
3. Install the top Speed Grille. Fasten the bottom side using four of the PN 71098 clips. Fasten the top side using the washers and silver colored screws and attach to the " L " brackets installed in step one.

TEMPLATE TOP

