



STREET SCENE EQUIPMENT, INC.

950-74622
BLACK POWDER COAT BLACK
950-77622 SATIN FINISH
950-78622 CHROME FINISH
2006 - 2007
DODGE CHARGER
LOWER VALANCE
SPEED GRILLE
FOR SSE FRONT FASCIA

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	12	Installation Clips # 71098
1	Care For Grilles	1	Street Scene Emblem		

TOOL LIST
NO TOOLS REQUIRED

1. Install the Speed Grille insert into the lower opening of fascia.
2. Clip from the back side by sliding the clip over the Speed Grille and over the edge of opening.
3. Use six clips on the top and six clips on the bottom side.
4. The illustration below shows how to install the installation clips.

TYPICAL CLIPPING INSTALLATION

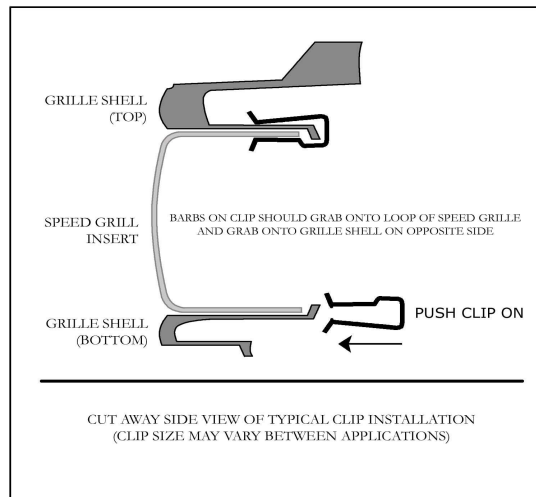

NOTE:

Speed Grilles are also available for the upper openings. Use Street Scene P.N. 950-7X621 Replace the X in the part number with the finish you prefer. 4 = Black Powder Coat 7 = Alum Anodized Satin 8 = Chrome Finish