STREET SCENE EQUIPMENT, INC.



INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE: It will be necessary to remove the front facia to install Speed Grille

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	7	Installation Clips # 71093
		1	Street Scene Emblem	1	Care For Grilles

TOOL LIST 12 MM Socket, 8 MM Socket, Ratchet, Extension,

- 1. Remove the headlight wipers by fliping up the cap and removing the 8 MM nut securing it.
- 2. Remove the fasteners located in the lower corners of the right and left wheel wells.
- **3.** Open hood. Remove the six fasteners across the top side of facia. To do this push the center in and pry out the fastener. Save all fasteners for re-assemble.
- 4. Remove the black impac strips.
- 5. Remove the two 12 MM head bolts that are now exposed.
- 6. Un-snap facia at the wheel well ends and remove.
- 7. Set on table or bench.
- 8. Depress the seven tabs to remove grille shell from facia.
- **9.** Install the Speed Grille into the facia. Clip Speed Grille to grille shell using four clips across the top and three across the bottom. Install clips through the holes vacated from grille removal.
- **12.** Install front facia in reverse order of removal.

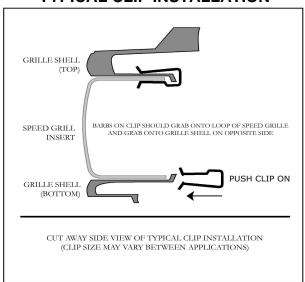

TYPICAL CLIP INSTALLATION