



# STREET SCENE EQUIPMENT, INC.

950-76760 BLACK CHROME  
 &  
 950-77760 SATIN FINISH  
 &  
 950-78760 CHROME FINISH  
 2005  
 SUPER DUTY / EXCURSION  
SPEED GRILLE INSERTS  
6 PC SET

## INSTALLATION INSTRUCTIONS


**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Upper Grille Section	1	Instruction Sheet	1	Right Grille Section
1	Lower Grille Section	1	Street Scene Emblem	1	Left Grille Section
1	Center Right Grille Section			32	Installation Clips # 71099
1	Center Left Grille Section			4	11" Tie Straps
				1	Care For Grilles Sheet


TOOL LIST	

1. Remove the four fasteners across the top of the grille shell. Pull the bottom toward you and unfasten the "push in" fasteners. If the fasteners remain in the core support remove and install on grille shell before final assemble.
2. Each Speed Grille insert is marked for it's proper location. Set the grille shell on a protective covered table. Install the Speed Grille inserts from the front side. Make sure you install them deep into the openings. The right and left Speed Grille inserts are fastened with two tie straps each. The other four Speed Grille are attached with the installation clips.
3. Fasten the right and left side Speed Grille inserts using the photos as a guide.


### PHOTOS

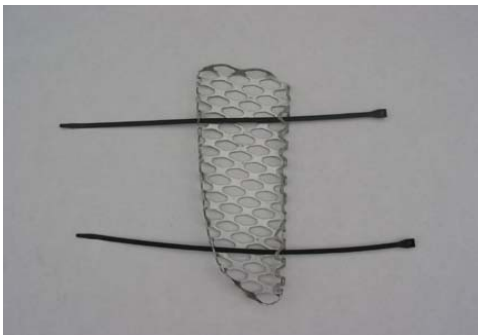

4. Fasten all other Speed Grilles using the installation clips as shown in illustration at right. Refer to the illustration below for placement of clips.

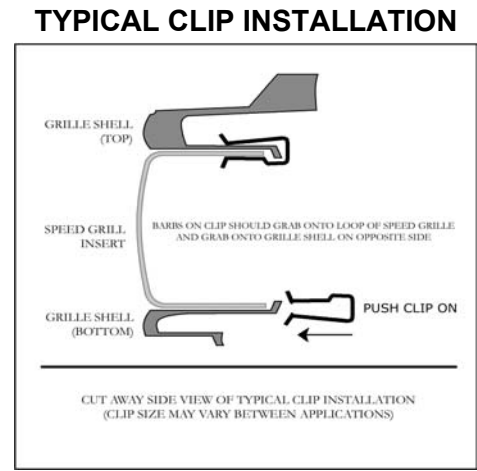

### PLACEMENT OF CLIPS

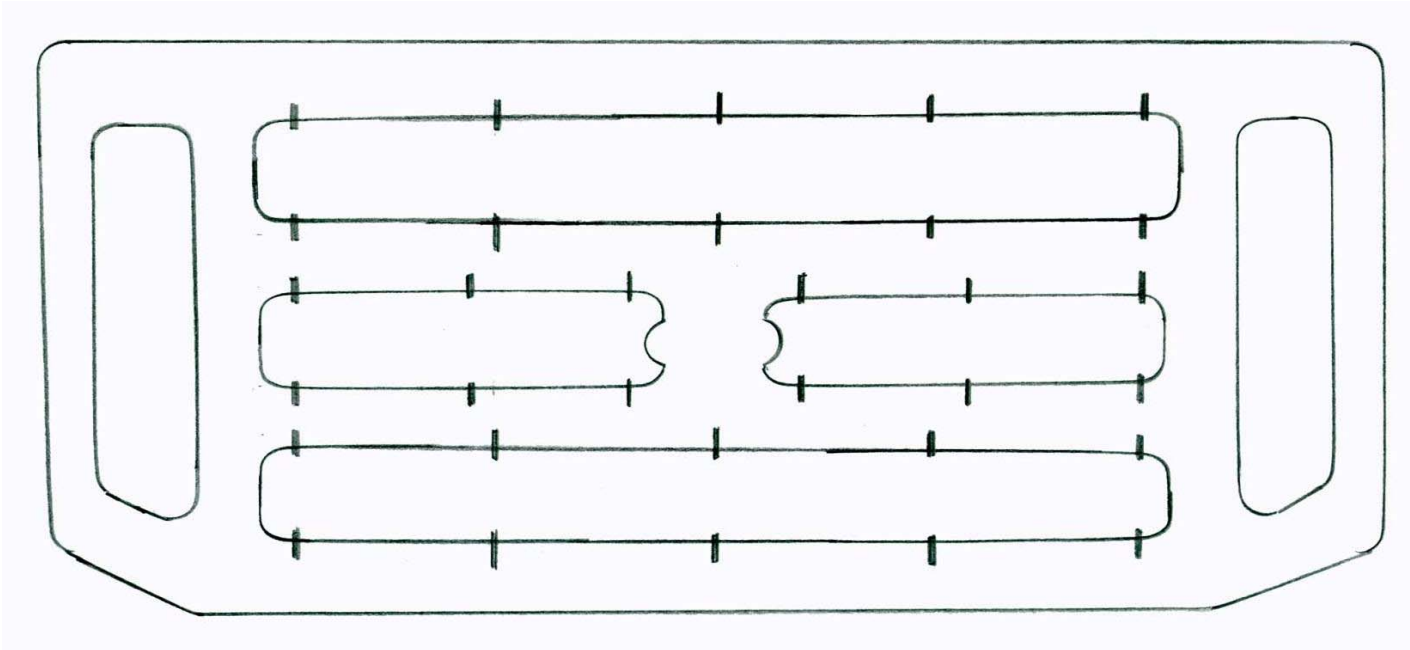

5. Install Grille shell into vehicle by aligning the four lower metal fasteners in the holes in core support. Snap place. Install the four fasteners on the top side.