



STREET SCENE EQUIPMENT, INC.

950-76839 BLACK CHROME
 950-77839 SATIN FINISH
 950-78839 CHROME FINISH
 2008
 FORD SUPER DUTY
 SSE BUMPER COVER
SPEED GRILLE INSERT
 GENERATION 1

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	4	Push In Fasteners # 18379
1	Care For Grilles	1	Street Scene Emblem	4	Installation Clips # 71097


TOOL LIST	
1/4" Drill Bit, Drill Motor, Flat Blade Screwdriver	

NOTE:

INSTALL SPEED GRILLE INSERT ON BUMPER COVER BEFORE INSTALLING BUMPER COVER

1. Install the Speed Grille insert to bumper cover with the short angled side facing up.
2. Attach to bumper cover using the clips provided, see drawing below.

TYPICAL CLIPPING INSTALLATION

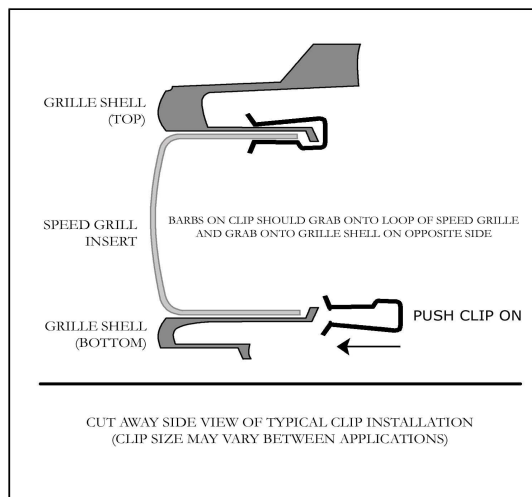

3. Attach the bottom side using the push in fasteners. Drill a 1/4" hole and push in to retain.