



**INSTALLATION INSTRUCTIONS**


**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet		
1 FT.	2" Two Sided Tape	1	Street Scene Emblem	6	# 10 Black Washerhead Screws
1	Care For Grilles Instructions			6	Installation Clips # 71099


TOOL LIST	
Phillips Head Screwdriver, 10 MM Wrench Or Socket & Ratchet, Pliers, X-acto Knife	

1. Open hood and unbolt the secondary hood release handle by removing the two 10 MM head bolts attaching it to the grille shell. It is not necessary to remove the release handle from vehicle.
2. Remove the six 10 MM head nuts attaching the grille shell to hood.
3. Remove the Toyota emblem from grille by depressing the two tabs on the upper side of the back of emblem.
4. Remove " Speed Grille " from package.
5. Insert the Speed Grille into the opening. NOTE: If your grille has a chrome inlay on it we highly recommend masking off and painting it black. Attach the top side using the six clips. Refer to Illustration I for clip placement. Fasten the bottom side using the six screws provided. Make sure the Speed Grille is against the OEM grille. Refer to Illustration II for proper screw placement. Install screws at the sides of " LOOP " in grille.

**ILLUSTRATION I**

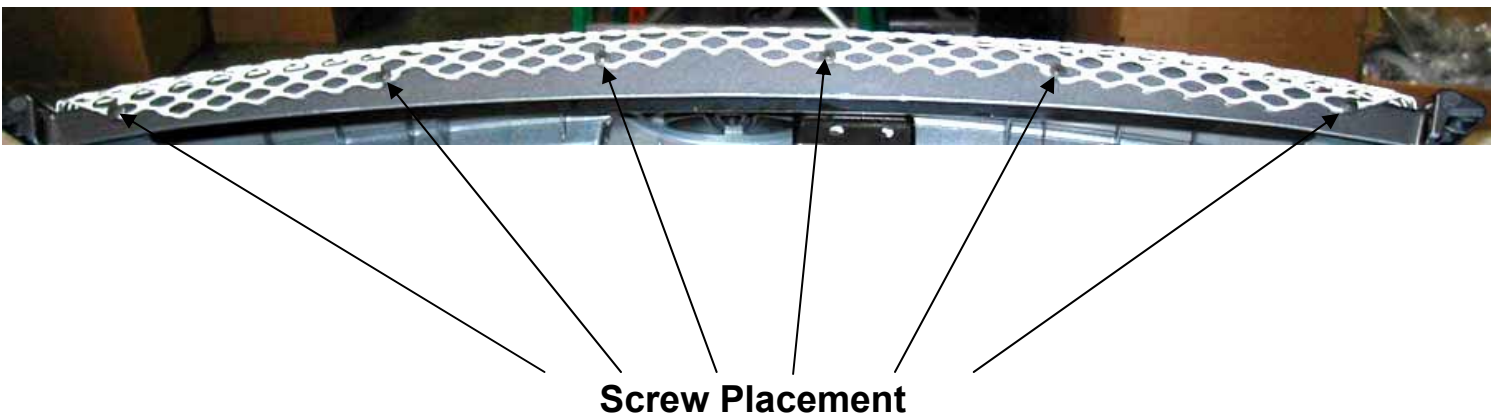

## ILLUSTRATION II

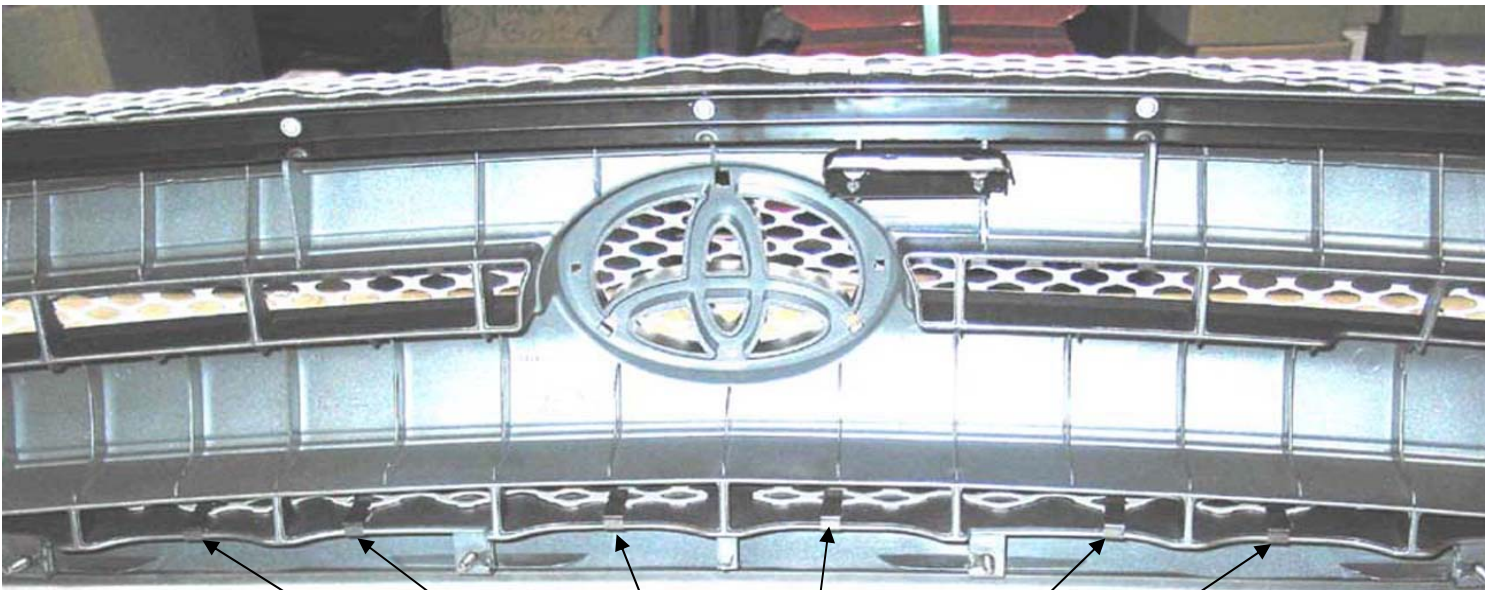

### Clip Placement

6. If you would like to re-install the Toyota emblem, cut off the mounting tabs with a pair of side cutters. Apply the two sided tape to the backside. With an X-acto knife cut out around the emblem. Peel off the backing and while aligning the emblem with the emblem back ground behind the Speed Grille, press gently to attach.
7. Install the " Street Scene " emblem to the right lower corner of grille. Remove the protective cover.
8. Install grille shell back into the vehicle.

### NOTE : BELOW TYPICAL CLIP INSTALLATION

