



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-77893
2002 - 2003
TOYOTA TUNDRA
OEM BUMPER GRILLE

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	12	Installation Clips # 71097
		1	Street Scene Emblem	1	Care For Grilles

TOOL LIST	
Small Flat Blade Screwdriver	

1. Raise the front of vehicle to gain access to the back side of bumper.
2. Install the Speed Grille into opening in bumper. Fasten into position using the installation clips as shown in photo. Use six clips across the top and six clips across the bottom. Installing the bottom clips will be difficult due to the bumper brace located just below the opening. You can install the clips first before you install the Speed Grille. While installing the Speed Grille use a small flat blade screwdriver to lift the edge of the clip over the return edge of grille.
3. Install the Street Scene emblem to grille face. Remove the protective cover.

TYPICAL CLIP INSTALLATION

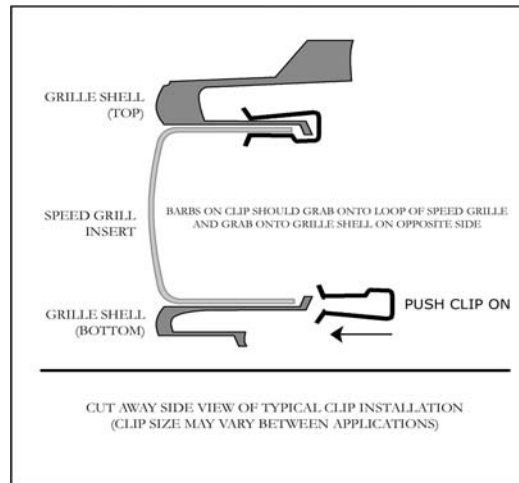

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

5/15/03 SSE 950-77893