



# STREET SCENE EQUIPMENT, INC.

**950-77235 SATIN FINISH**  
**&**  
**950-78235 CHROME FINISH**  
**2004**  
**GMC CANYON**  
**SPEED GRILLE INSERT**


## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet		
1	Care For Grilles	1	Street Scene Emblem		
8	Installation Clips # 71099 ( Narrow Body )				
6	Installation Clips # 71096 ( Wide Body )				

TOOL LIST	
Flat Blade Screwdriver	


1. Open hood and unplug the parking lamps at the top corners of grille.
2. Remove grille shell from vehicle by grasping the shell and pulling to release the fasteners. **NOTE:** there are no screws securing the grille shell.
3. Set the grille shell on a protective coverd bench or table.
4. Remove the GMC logo.
5. Install the Speed Grille into the grille shell by inserting the bottom side in first, and then slightly pinching the top side while pushing it in. Make sure Speed Grille is pushed in all the way.

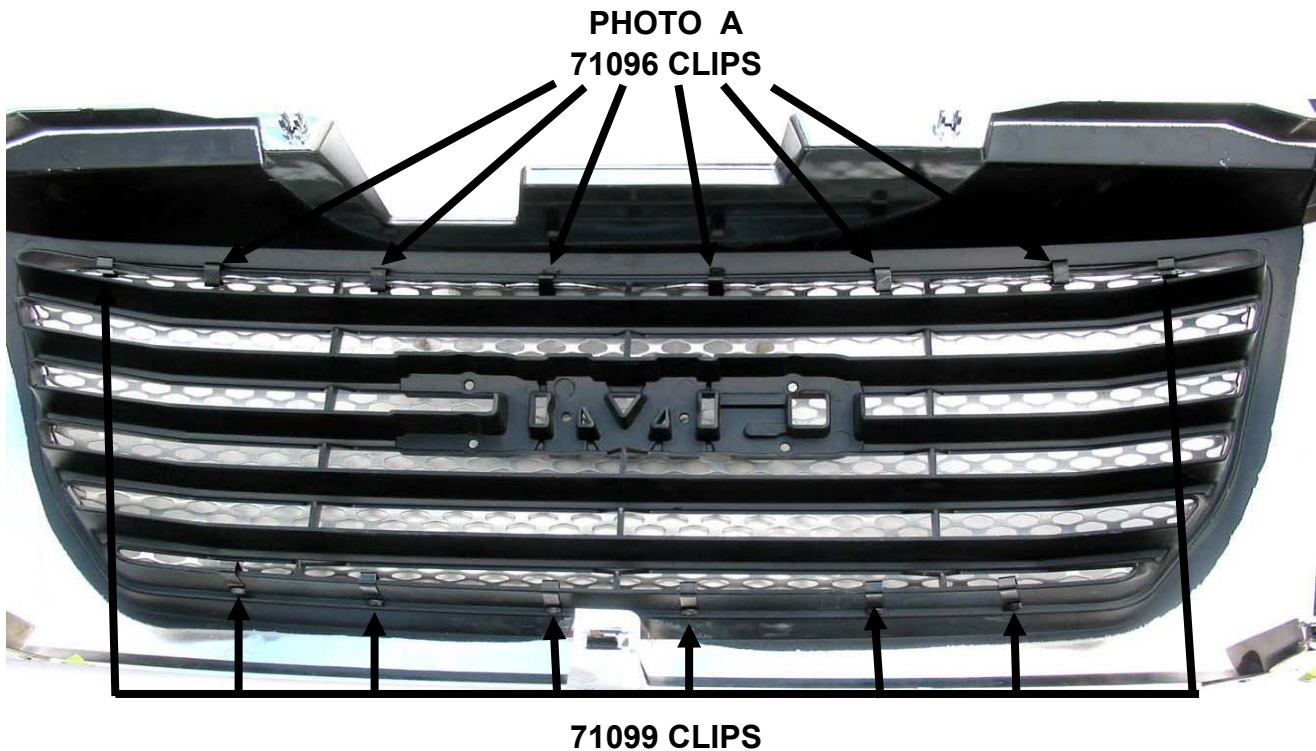

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6. Refer to photo A and "Clip" the Speed Grille to the grille shell at the points shown. Using a flat blade screwdriver will help by gently lifting the edge of clip when installing. DO NOT "Stretch" the clip.
7. Refer to illustration 1 when installing the 71096 clips.

### ILLUSTRATION 1

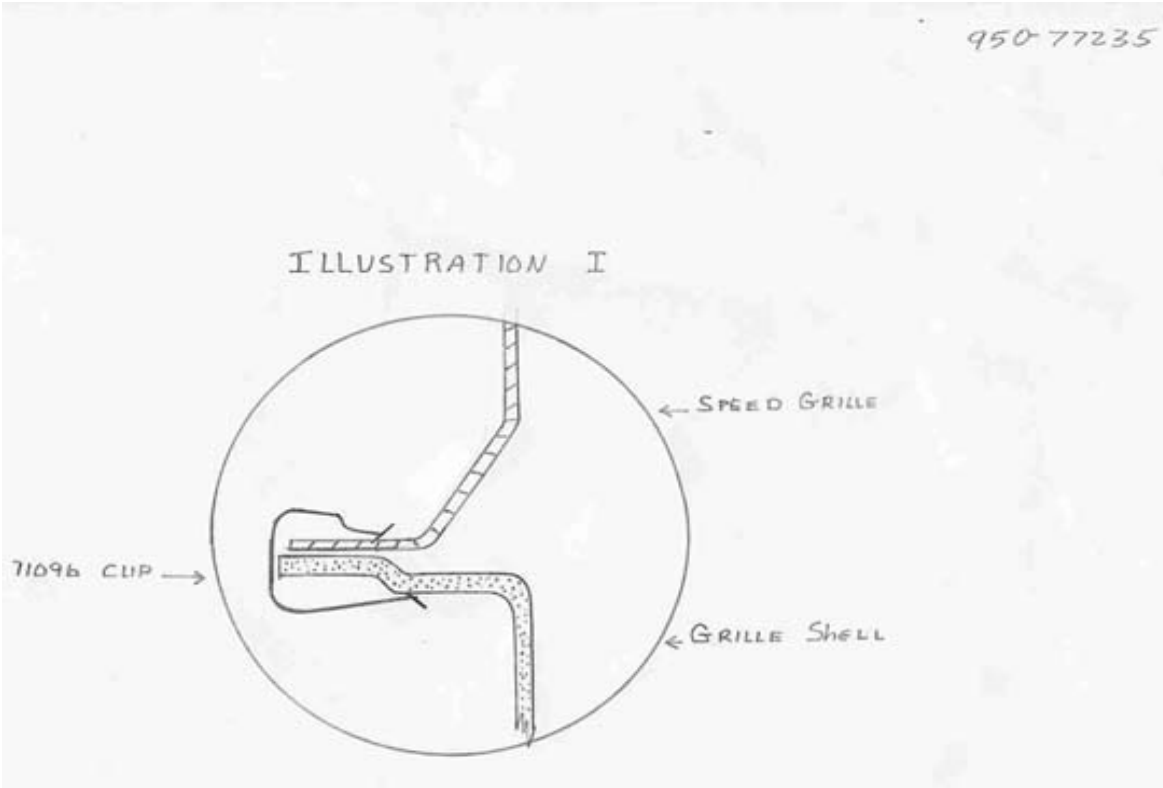

8. Install grille shell back into truck. Make sure all fasteners points are fastened NOTE: the mounting points at lower right & left of center of grille are very thin. DO NOT use excess force, or the mounting points will bend. If they do they can be straighten with minimal effort.