



# STREET SCENE EQUIPMENT, INC.

950-76836 BLACK CHROME  
 950-77836 SATIN FINISH  
 950-78836 CHROME FINISH  
SPEED GRILLE INSERT  
 2007  
 FORD EXPEDITION WITH  
 SSE FRONT FASCIA

## INSTALLATION INSTRUCTIONS


**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

| PARTS LIST |                     |   |                     |   |                                |
|------------|---------------------|---|---------------------|---|--------------------------------|
| 1          | Speed Grille Insert | 1 | Instruction Sheet   | 4 | Installation Clips # 71098     |
|            |                     | 1 | Street Scene Emblem | 4 | Installation Clips # 71099     |
|            |                     |   |                     | 4 | 1/4" Push In Fasteners # 18379 |

| TOOL LIST               |
|-------------------------|
| Door Panel Removal Tool |

1. Remove the four "push in" fasteners that attach the rubber apron to the round crossmember to gain access to the back side of fascia.
2. Install the Speed Grille into the opening from the front side.
3. Clip the top side to the fascia using the 71098 clips ( Shorter Clips ). Clip the bottom side to the fascia using the 71099 clips ( Longer Clips ). See illustration below.

### TYPICAL CLIP INSTALLATION

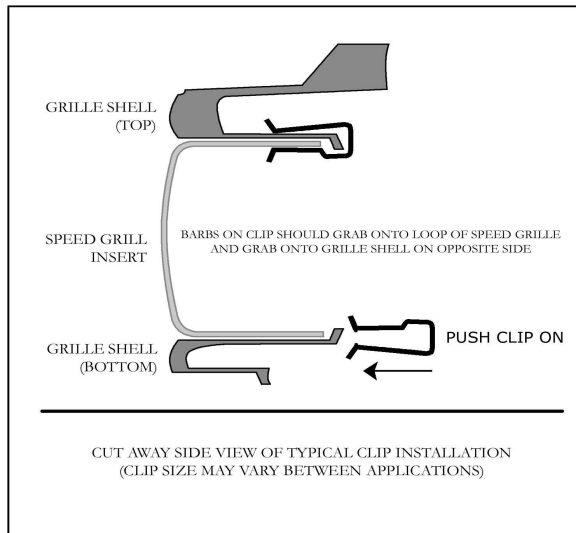

4. Re-attach the rubber apron using the new push in fasteners supplied.