



STREET SCENE EQUIPMENT, INC.

950-76923 BLACK CHROME
950-77923 SATIN FINISH
950-78923 CHROME FINISH
2008 - 2009
PONTIAC G-8
SPEED GRILLE INSERTS

INSTALLATION INSTRUCTIONS


ALSO AVAILABLE LOWER GRILLE INSERTS P.N. 950-77924

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST			
1	RT Speed Grille Insert	1	Instruction Sheet
	LT Speed Grille Insert	16	Speed Grille Mounting Ties (11")
1	Care For Grilles	1	Street Scene Emblem

TOOL LIST	
Side Cut Pliers	

1. Remove both grille assemblies from vehicle by grasping off or prying (taking care not to scratch fascia or grille.) The chrome surround and pulling to release the unit from the front fascia.
2. Set the Speed Grille insert into the OEM grille over the black grids. DO NOT remove grids (They are part of the fastening system.)
3. Secure each Speed Grille to the grille assemble using four mounting ties. Use one at each corner. Pull snug and cut off excess.

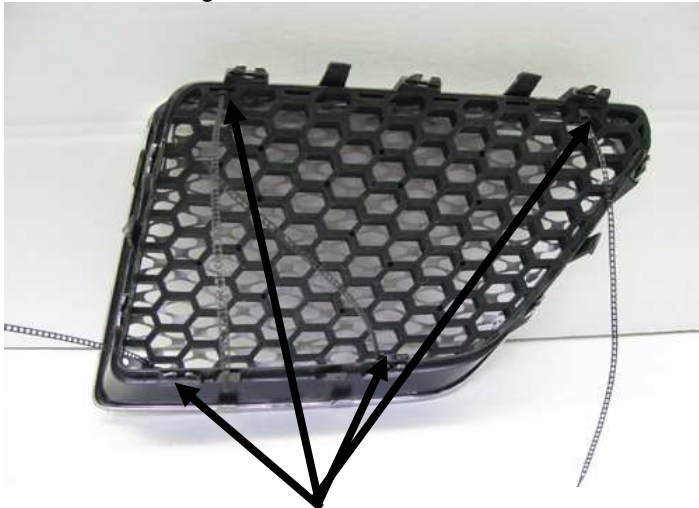

Placement Of Mounting Ties



4. " Snap " each grille assemble back into fascia. Make sure unit is snapped in tight.