



STREET SCENE EQUIPMENT, INC.

950-80227

2010

CHEVY CAMARO

MAIN GRILLE

PHANTOM STYLE

BLACK BILLET

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Billet Insert	1	Instruction Sheet	4	4" Long Bolts All Thread
4	Nyloc Nuts	4	L Stop Brackets		

TOOL LIST	
Phillips Screwdriver, 3/8" Wrench, Ratchet, 3/8" Socket	

1. Open your grille insert and place the four bolts into place on the grille insert mounting holes. Then set in place pushing the four bolts thru the stock grille.

Mounting Holes

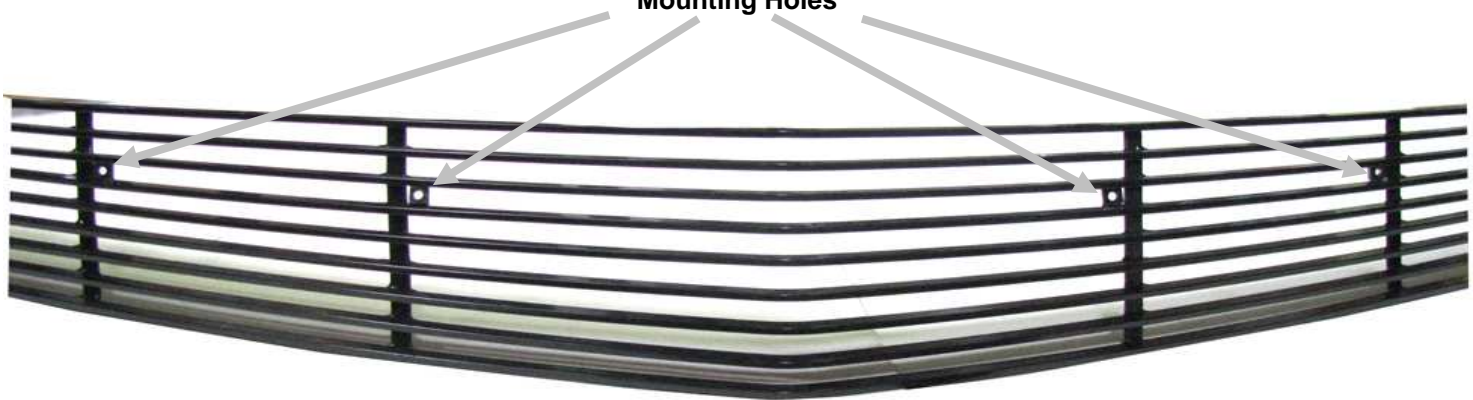

2. From the back side put the L stop bracket on the four bolts and the the nyloc nut. Snug all nuts then make sure the insert strait and tighten all nuts.

Shop for other custom grilles on our website.