



STREET SCENE EQUIPMENT, INC.

950-77926 SATIN FINISH
950-78926 CHROME FINISH
2005 - 2007
CHEVY COLBALT
SPEED GRILLE INSERT

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Upper Speed Grille	1	Instruction Sheet	4	Push In Fasteners # 18379
1	Lower Speed Grille	1	Street Scene Emblem		
		6	Tie Straps # 10060		

TOOL LIST	
Drill Motor, 1/4" Drill Bit, Side Cut Pliers	

1. Set the lower Speed Grille section over the top of the black grid bars. Make sure that the Speed Grille goes under the bottom of grid bar. Attach to the bars using four of the tie straps supplied, Loop the tie strap around the loop of Speed Grille (where it will not be seen from the front side) and then around the grid bar. Install all ties snug up slowly by reaching in from behind. Cut off excess.
2. Install the top Speed Grille in the same manner. Fasten the bottom of it to the grid bars using two tie straps. The top side will be fastened with the four push in fasteners. Push the top of Speed Grille back. Drill four 1/4" holes through the hole in the Speed Grille (See Photo) and into the top panel. Fasten Speed Grille using the four " Push In " fasteners.

PHOTO 1

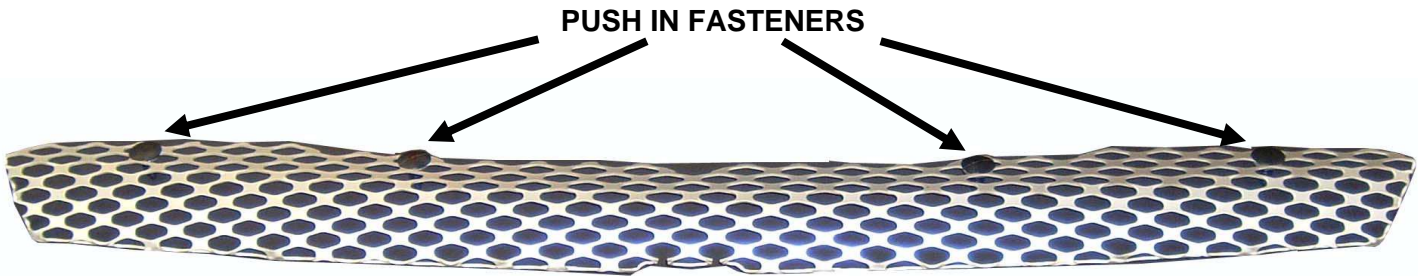

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.