

ALL PARTS ARE TO BE INSTALLED BY A CERTIFIED ASE TECHNICIAN



2007-2009 Mercedes-Benz GL320
2010-2012 Mercedes-Benz GL350
2007-2009 Mercedes-Benz ML320
2006-2011 Mercedes-Benz ML350
2010-2011 Mercedes-Benz ML450
2006-2007 Mercedes-Benz ML500
2008-2011 Mercedes-Benz ML550


Shock Absorbers Rear

129M-12-R


Installation Instructions



Before you begin the removal or installation, please read all or the instructions thoroughly!
The warranty will be void if instructions are not followed exactly. Do not work under a vehicle supported by a jack.
Always support the vehicle safety standards.

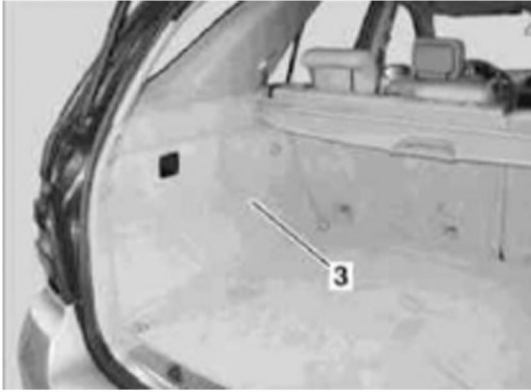

1. Remove paneling (#3).

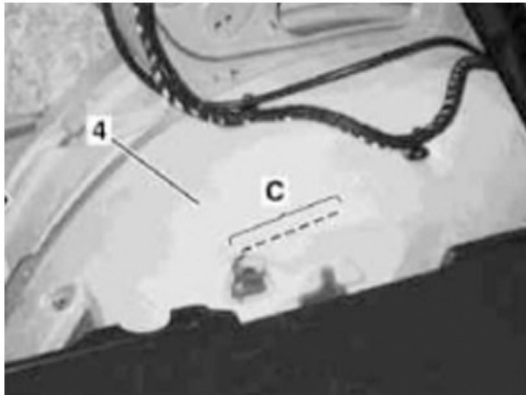

***Cut length (C) is approximately 12 cm.
Carefully unfold sound deadening mat at
cut section to ensure that it does not tear.***

2. Cut the damping mat (#4) in the area of the upper fixing of the rear shock absorber (#1) and fold up.

3. Raise vehicle on lifting platform.

4. Remove rear wheel.



5. Remove fender liner in rear fender (#6).




BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, PLEASE READ ALL OF THE INSTRUCTIONS THOROUGHLY!

THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER A VEHICLE SUPPORTED BY A JACK.


ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.



6. Remove electrical connector (#7).

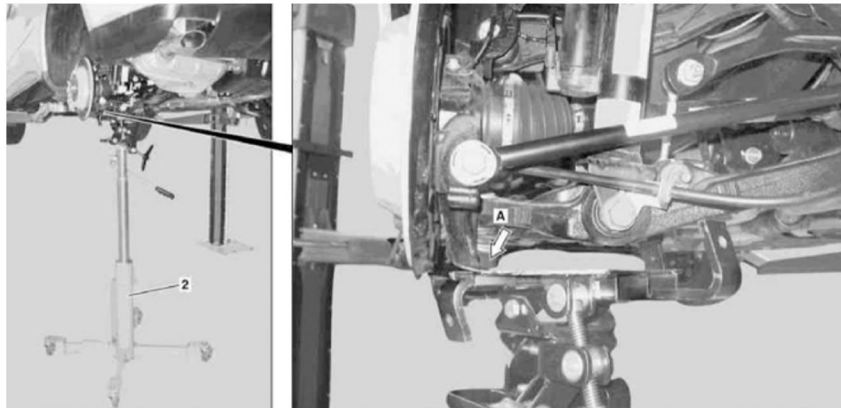

7. Raise the suspension with telescoping transmission jack (#2) and passenger car transmission platform under the supporting joint (Arrow A) far enough until the suspension is slightly deflected.

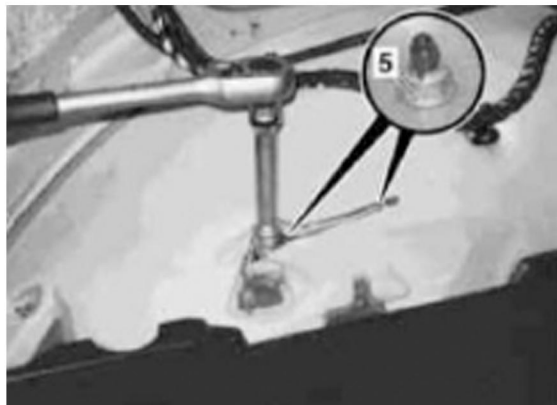


8. Unscrew nuts (#5).



BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, PLEASE READ ALL OF THE INSTRUCTIONS THOROUGHLY!

THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER A VEHICLE SUPPORTED BY A JACK.

ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.

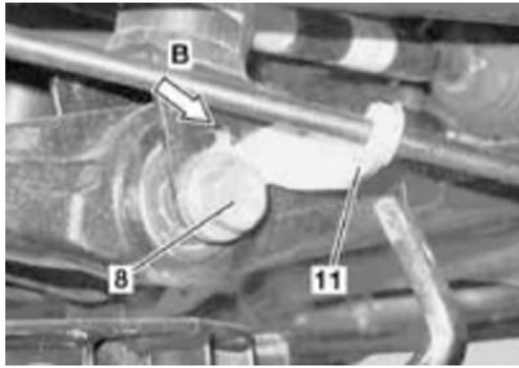

9. Remove bolt (#8).

10. Slide rear shock absorber together and remove.

11. Install in reverse order.