

ALL PARTS ARE TO BE INSTALLED BY A CERTIFIED ASE TECHNICIAN



1999-2006 Mercedes S Class

Air Suspension Strut

134M-28-F

Installation Instructions



Before you begin the removal or installation, please read all or the instructions thoroughly!
The warranty will be void if instructions are not followed exactly. Do not work under a vehicle supported by a jack.
Always support the vehicle safety standards.



BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, PLEASE READ ALL OF THE INSTRUCTIONS THOROUGHLY!

THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER A VEHICLE SUPPORTED BY A JACK.

ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.


1. Disconnect Battery Located in Passenger Side of Trunk Under Liner.




2. Disconnect Air Line Fitting From the top of Strut.




3, Remove the 3 Retaining Nuts From the Top of The Strut

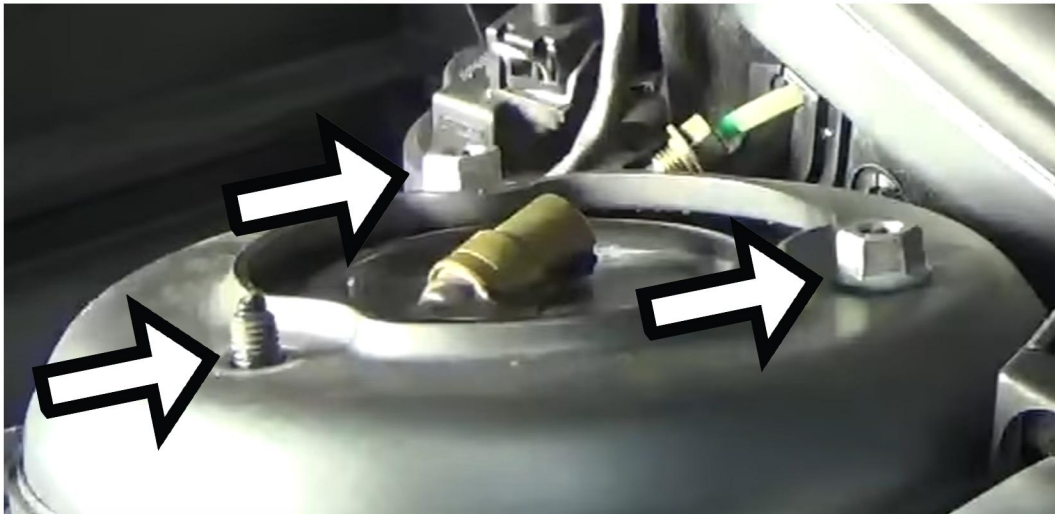


4. Locate the Electrical Plugs Inside the Wheel Well. Lift up the Retaining Clip and Remove Connectors.

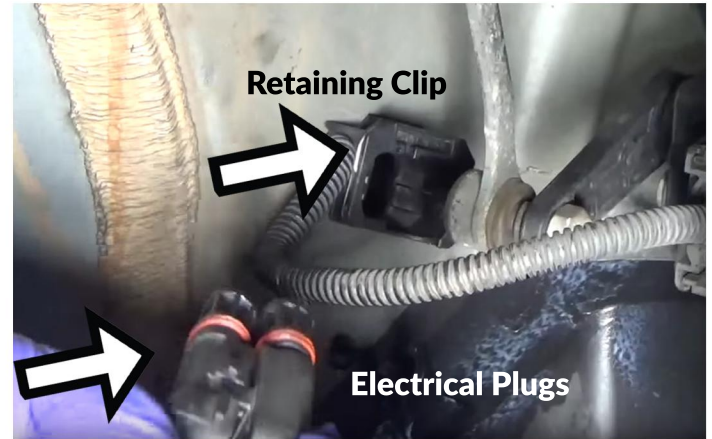

5. Remove Set Screws From Bottom of Strut on Either Side.

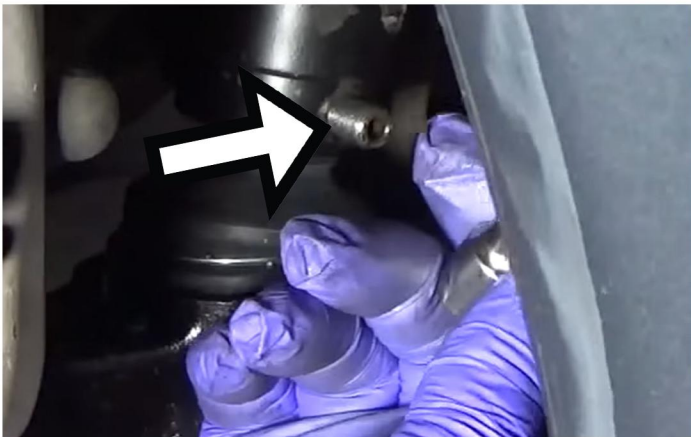

6. Separate Upper Control Arm Ball Joint from the Spindle Assembly. Remove Strut Assembly.

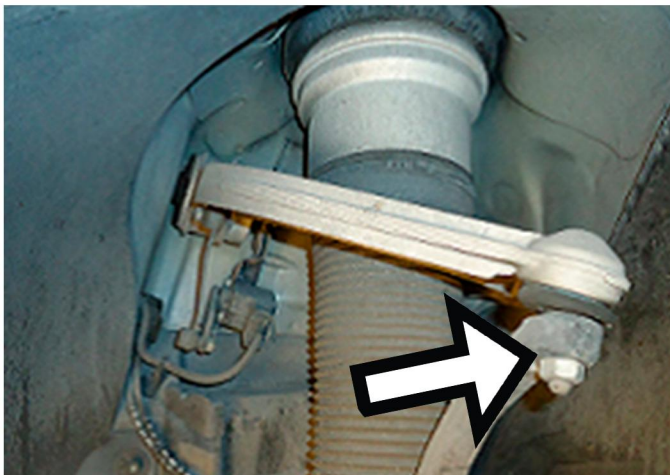

Pro Tip: Using a Ball Joint Tool Will Remove Easier.



7. Install In Reverse Order.