



For ALL Your Air Suspension Needs!!!

1997-2002

***Lincoln Navigator
Ford Expedition***

**53F-12-F
Front Shock**





For ALL Your Air Suspension Needs!!!

WARNING:

BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY! THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER CAR UNDER A VEHICLE SUPPORTED BY A JACK. ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.

Removal


1. Hold the shock absorber stem and remove the upper front shock absorber nut, and washer assembly.



2. WARNING: The electrical power to the air suspension system must be shut off prior to hoisting, jacking or towing an air suspension vehicle. This can be accomplished by turning off the air suspension switch located in the RH kick panel area. Failure to do so can result in unexpected inflation or deflation of the air springs, which can result in shifting of the vehicle during these operations. Raise and support the vehicle.

3. Remove the shock absorber.


- A) Remove the lower nut and bolt.
- B) Remove the shock absorber.

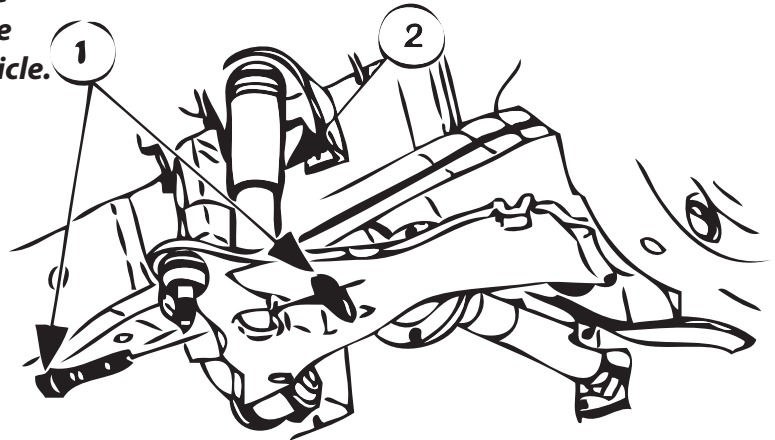

Installation

1. Follow the removal procedure in reverse order.

77-103 Nm (57-76 lb/ft)

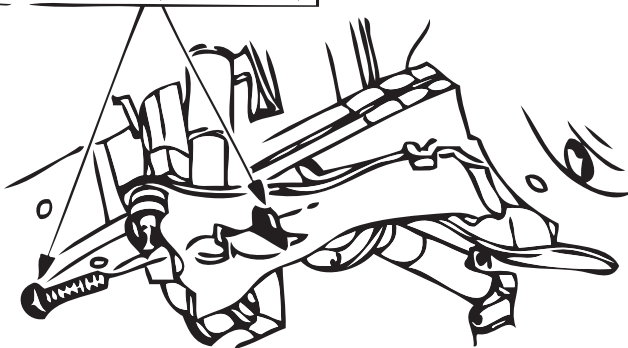

30-40 Nm (22-29 lb/ft)

