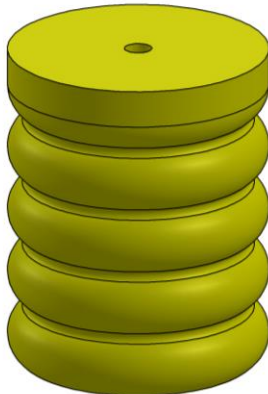


SumoSprings®

Builder Kits for Custom Applications

*SFR-100-40, SFR-100-47, SFR-100-54, SFR-102-40, SFR-102-47,
SFR-102-54, SFR-104-40, SFR-104-47, SFR-104-54*

Installation Instructions

SFR-100	SFR-102	SFR-104
		
		
-40	-47	-54

These SumoSprings Builder Kits are meant for use on custom applications and can be mounted in a variety of ways. Customer supplies their own hardware and bracketry. We recommend using Grade 8, 3/8 hardware or similar. Always use 4" steel washer (included) as a backing plate for the SumoSprings. Ensure load is applied as perpendicular to the SumoSprings as possible.

Important Notice.

- 1) For easy installation please read instructions completely first and have all necessary tools available.
- 2) We recommend that this installation be done by a professional or persons with sound mechanical knowledge.
- 3) These instructions are meant as a guide for the installation of SumoSprings. SuperSprings International assumes no liability for the actual installation process. Installers should apply common automotive safety practices when raising, lowering and working on vehicles.
- 4) SumoSprings are designed to enhance the vehicles load carrying performance and road handling however it does not authorize (or recommend) loading beyond the manufacturer's GVWR specifications.

To prevent damage to the vehicle and to ensure safety, do not exceed the maximum load recommended by the vehicles manufacturer (GVWR).