




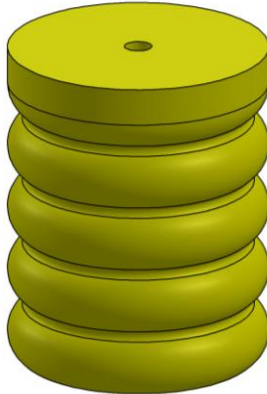


# SumoSprings®

## Builder Kits for Custom Applications

**SFR-100-40, SFR-100-47, SFR-100-54, SFR-102-40, SFR-102-47,  
SFR-102-54, SFR-104-40, SFR-104-47, SFR-104-54**  
**Installation Instructions**

SFR-100	SFR-102	SFR-104
		
		
<b>-40</b>	<b>-47</b>	<b>-54</b>

These SumoSprings Builder Kits are meant for use on custom applications and can be mounted in a variety of ways. Customer supplies their own hardware and bracketry. We recommend using Grade 8, 3/8 hardware or similar. Always use 4" steel washer (included) as a backing plate for the SumoSprings. Ensure load is applied as perpendicular to the SumoSprings as possible.

**Important Notice.**

- 1) For easy installation please read instructions completely first and have all necessary tools available.
- 2) We recommend that this installation be done by a professional or persons with sound mechanical knowledge.
- 3) These instructions are meant as a guide for the installation of SumoSprings. SuperSprings International assumes no liability for the actual installation process. Installers should apply common automotive safety practices when raising, lowering and working on vehicles.
- 4) SumoSprings are designed to enhance the vehicles load carrying performance and road handling however it does not authorize (or recommend) loading beyond the manufacturer's GVWR specifications.

***To prevent damage to the vehicle and to ensure safety, do not exceed the maximum load recommended by the vehicles manufacturer (GVWR).***