

**21208  
21208B  
14-15 GMC  
SIERRA 1500**



**21208  
21208B  
14-15 GMC  
SIERRA 1500**

## **GMC SIERRA 1500**


### **4 Pc. Billet Grille**

#### **TOOLS REQUIRED:**

Flat/Phillips Screwdrivers

#### **PARTS LIST**

- (10) 1 x 1/4" x 55 d. L Brackets
- (10) # 8 U-Nuts
- (10) #8 (6 head) 1 1/4 screws
- (1) 4 Pc. Grille

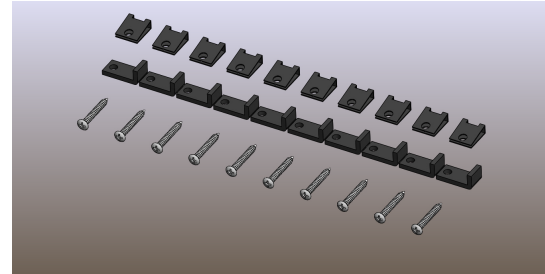

### **Step 1 Billet Grille Installation**

Take the u-nuts and install them onto the brackets with the barb on the u-nut on the bent side of the bracket aligned with the hole in the bracket (Fig 1). Locate the small square tabs with a hole in the center located on the back of the four billet grilles. Take the screws and insert them through the billet bars and the small hole on the tabs, place the brackets with the u-nuts installed onto them onto the screws with the bent end of the bracket pointed away from the billet grille and turn the screw a couple of turns to get the screw started into the u-nuts (Fig 2). Take the billet grille and insert it into the appropriate opening in the factory grille, turn the brackets sideways to fit between the plastic bars in the factory grille (Fig 3). With the billet grille inserted into the factory grille use a small screwdriver to reach between the billet bars and turn the bracket so that it latches onto the plastic bars in the factory grille, tighten the screws with another screwdriver (Fig 4). Repeat this step on the remaining billet grilles. Installation complete.

