

**25032/25032B**  
**14-15 CHEVROLET**  
**CAMARO SS**



**25032/25032B**  
**14-15 CHEVROLET**  
**CAMARO SS**

## **CHEVROLET CAMARO SS**


### **Billet Bumper Grille**

#### **TOOLS REQUIRED:**

Flat/Phillips Screwdrivers

#### **PARTS LIST**

- (1) grille
- (4) #8 U-Nuts
- (4) #8 6 Head 2" Screws
- (4) Camaro Support Brackets

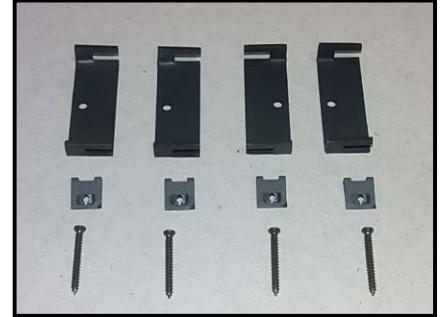

#### **Step 1 Grille Installation**

Take the four Camaro support brackets and install the four u-nuts onto them (Fig 1).

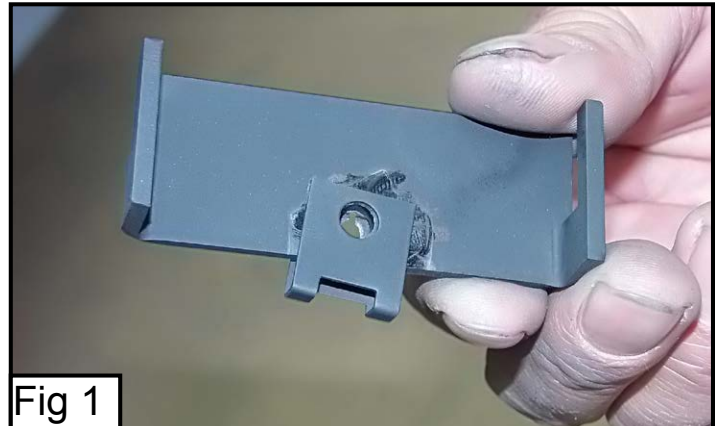


Fig 1

#### **Step 2**

From the driver side insert the brackets through the bars and slide the brackets opening through the vertical bars. Make sure to slide towards the driver side and vice versa for the passenger side. Place a bracket on the second and fourth vertical bar from each side. The u-nuts on the brackets should align with the small square tabs with the hole in the center that are welded to the back of the billet grille.



Fig 2

**25032/25032B**



**25032/25032B**

**Step 3 Grille Installation**

With all the brackets installed on the bumper overlay your billet grille into the factory bumper. Make sure the holes on the welded tabs on the back of the billet grille align with the u-nuts installed on the brackets. Insert the 2" screws through the hole in the tab on the back of the billet grille and the u-nuts and tighten. This will keep your grille secured and in place. Installation complete.



**Fig 3**