




Sports Series Mesh Grille

Tools Required

- Flat Head Screwdriver
- Phillips Head Screwdriver
- 10mm Socket
- Ratchet & Extensions

Hardware Contents

- (3) 1/4" Lock Washers
- (3) 1/4" Bolts
- (3) L Brackets

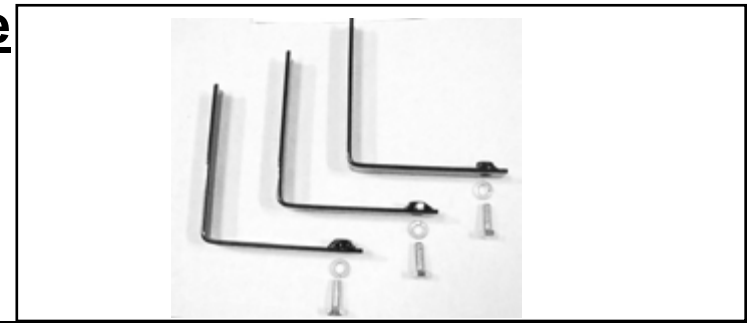

45452 - 47452

2013-2015 Ram HD



Step 1

Remove four plastic pop clips from the top of the plastic radiator cover. Remove the radiator cover.



Step 2

Remove four 10mm bolts from the top of the factory grille where it attached to the core support. Pull the factory grille off by pulling from the bottom corner edges up and forward.



Step 3

On the back edge of the bumper steel metal there are holes. Take the three bolts and washers and insert them through the holes in the bumper with the threads facing forward. Do not tighten bolts fully. NOTE: If your trucks has a factory grille remove the factory grille first.



Step 4


Place the mesh grille in the back of the bumper up against the opening. Position the L brackets against the mesh as shown. Secure the grille in place by tightening the bracket screws. The tension will keep the grille in place. Reinstall the factory grille. Your installation is now complete.



Sports Series Mesh Grille

45452 - 47452

2013-2015 Ram HD

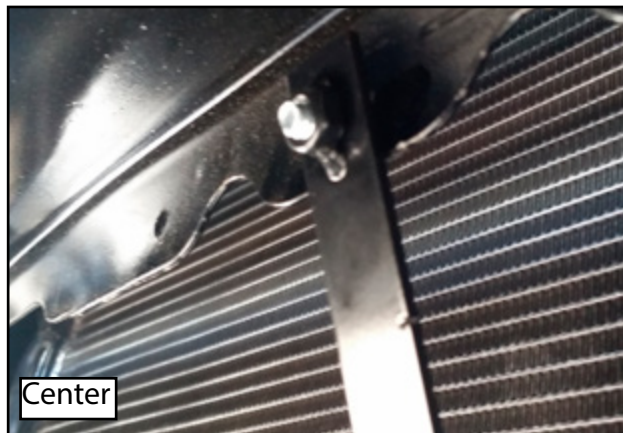

Bracket Position

Bracket location from left to right (facing front of vehicle)



Bracket Position

Bracket location from left to right (facing front of vehicle)