

**54056/51056**  
2015 Chevrolet  
Tahoe/ Suburban



**54056/51056**  
2015 Chevrolet  
Tahoe/ Suburban


## 2015 Chevrolet Tahoe/ Suburban Upper Class Grille Replacement 1pc

### TOOLS REQUIRED:

Flat Head Screwdriver  
7mm Socket  
10mm Socket  
6/32 Socket  
Ratchet & Extensions


### PARTS LIST

(4) Plastic Fasteners

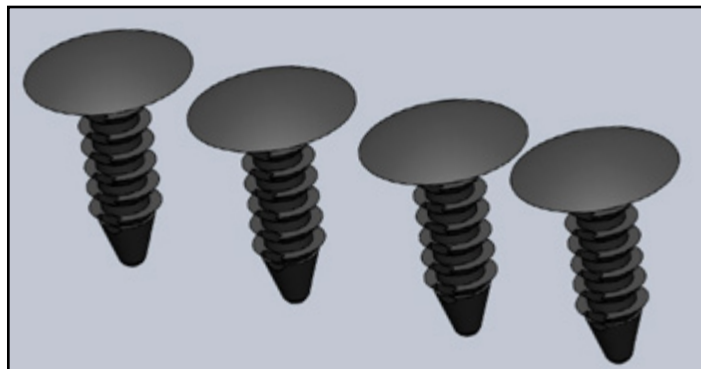


### Step 1

Open hood and remove the 12 plastic push clips securing the plastic radiator shroud to the radiator core. Carefully use a flat head screwdriver to release the clip up, you can now remove the clips. Once all clips have been removed the plastic radiator shroud can be removed. (Fig 1)

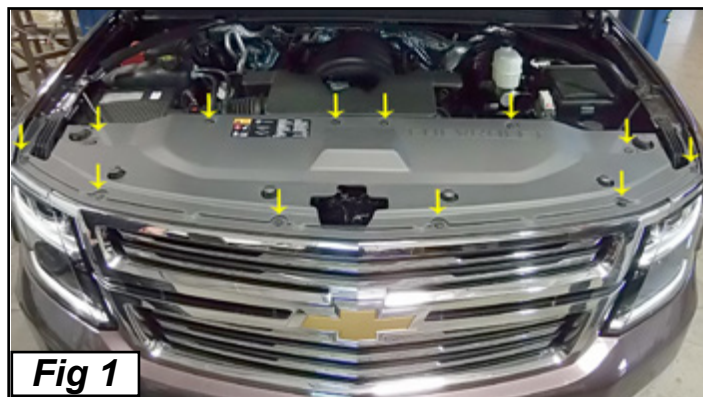

### Step 2

Using your 10mm socket and ratchet remove the six (6) 10mm bolts securing the upper grille assembly to the radiator support. (Fig 2)

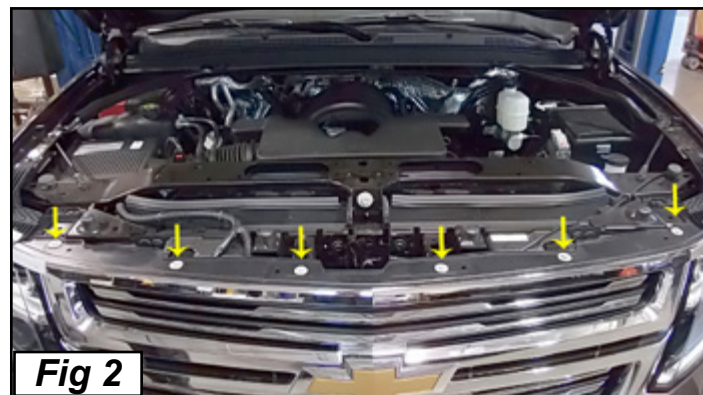

**54056/51056**  
**2015 Chevrolet**  
**Tahoe/ Suburban**



**54056/51056**  
**2015 Chevrolet**  
**Tahoe/ Suburban**


**Step 3**

Move to the sides of the front bumper and remove the six (6) 7mm bolts securing the lower bumper cover to the inner fender liner and fender. Turning the wheels will allow with additional room to remove the bolts. Repeat on opposite side of bumper. (Fig 3)




**Step 4**

Under the front bumper remove the eight (8) 10mm bolts securing the bottom of the bumper to the chassis. Two in the center and three (3) on each side. Finally detach the lower wiring harness clips securing the lower wiring harness to the bumper. (Fig 4)

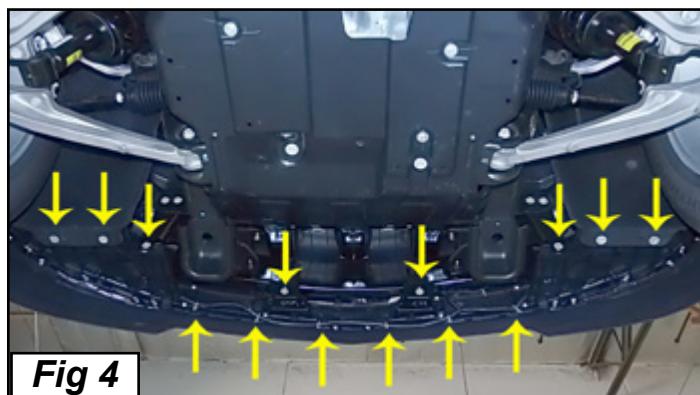

**Step 5**

Return to the top of the grille assembly, gently pull back on the top of the assembly to access the rear of the grille assembly. Disconnect the fog light wiring harness, then remove the two (2) 10mm securing the bumper to the chassis. Finally with your flat head screwdriver to depress the two lower tabs securing the bumper to the chassis. (Fig 5)

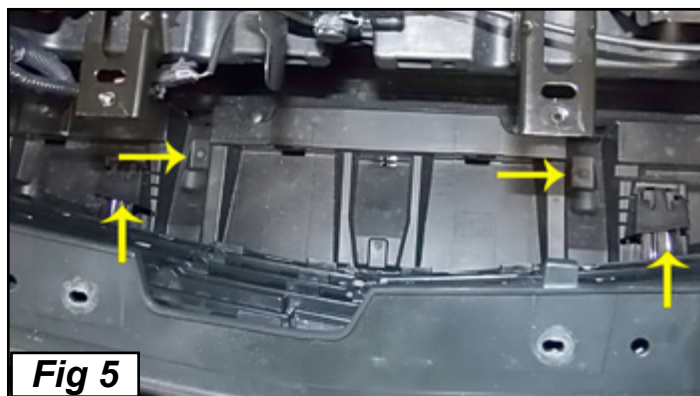

**Step 6**

Firmly grasp the side of the bumper by the fender and carefully detach the end of the bumper from its retaining clip. Repeat on opposite side. (Fig 6)




**54056/51056**  
**2015 Chevrolet**  
**Tahoe/ Suburban**



**54056/51056**  
**2015 Chevrolet**  
**Tahoe/ Suburban**

**Step 7**

With the help of an assistant. The front bumper can now be removed by pulling the entire bumper/ grill assembly away from the front of the vehicle. Place Grille/ Bumper assembly on a soft surface. (Fig 7)

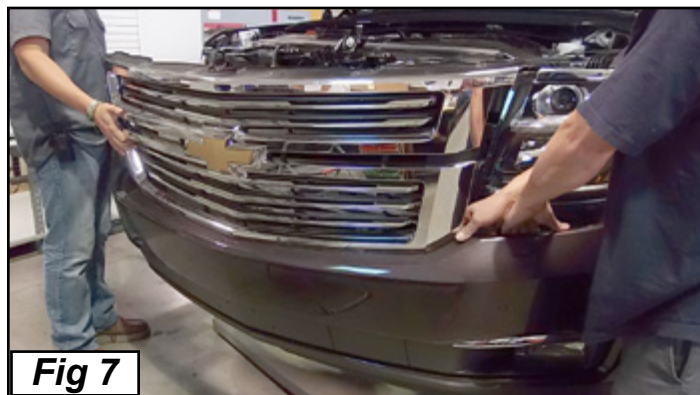

**Step 8**

With the bumper assembly facing down un-clip the factory wiring harness from the grille. Then remove the (5) 10mm screws from each side of the grille. The grille can now be separated from the bumper. (Fig 8)



**Step 9**

Insert the new grille assembly into the factory bumper. Secure the lower portion of the grille to the bumper with the included plastic clips. (Fig 9)



**Step 10**

Reinstall the bumper/grille assembly back into the vehicle and secure with the factory hardware. (Fig 10)



**54056/51056**  
**2015 Chevrolet**  
**Tahoe/ Suburban**



**54056/51056**  
**2015 Chevrolet**  
**Tahoe/ Suburban**

**Step 11**

Your installation is now complete. Reattach the grille/ bumper assembly back to the vehicle in reverse order of removal. Make sure you reconnect all disconnected wiring harness and reattach all clips and screws. (Fig 11)

