

54129
51129
13-14 CHEVY
SPARK



54129
51129
13-14 CHEVY
SPARK

CHEVY SPARK

TOP Mesh Grille

Install time: 20 Mins.

<u>TOOLS REQUIRED:</u>	<u>PARTS LIST TOP GRILLE:</u>	<u>PARTS LIST BOTTOM GRILLE:</u>
1/16 Drillbit	(1) Grille	(1) Grille
Screwdriver	4) #8 (6head) 1 1/4" Steel Screw	(7) #8 (6head) 1 1/4" Steel Screw

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE ATTEMPTING INSTALLATION.



Step 1 Grille Placement

- Place the Mesh Grille onto the Factory Grille. (Fig. 1)

Step 2 Grille Install

- With a 1/16 Drillbit, Drill through the Holes on the Mesh Grille. (Fig. 2)
 - Thread in the 1 1/4" Steel Screws Through the Holes you Drilled. (Fig. 3)
- Repeat for Remaining Holes.

INSTALLATION COMPLETE

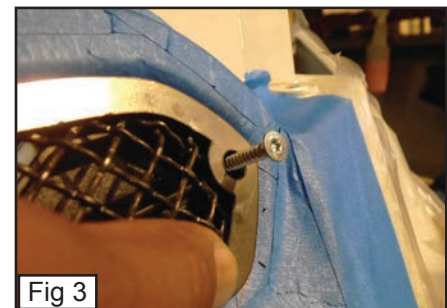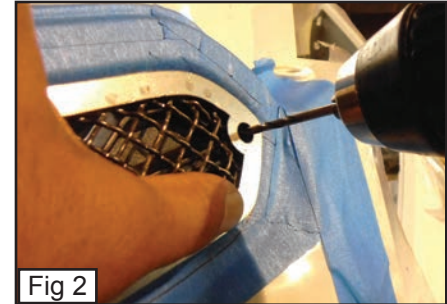

54129
51129



54129
51129

CHEVY SPARK
BOTTOM Mesh Grille
Install time: 20 Mins.

TOOLS REQUIRED:

1/16 Drillbit
Screwdriver

PARTS LIST:

(1) Grille
(7) #8 (6head) 1 1/4" Steel Screw

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE ATTEMPTING INSTALLATION.

Step 1 Grille Placement

• Place the Mesh Grille onto the Factory Grille. (Fig. 1)

Step 2 Grille Install

- With a 1/16 Drillbit, Drill through the Holes on the Mesh Grille. (Fig. 2)
- Thread in the 1 1/4" Steel Screws Through the Holes you Drilled. (Fig. 3)
Repeat for Remaining Holes.

INSTALLATION COMPLETE

