

# **T-REX**

## **Billet Grilles**

**55462**

**08 DODGE**  
**MAGNUM**

**55462**

**08 DODGE**  
**MAGNUM**

### **UPPER CLASS MESH GRILLE – 1 PC**

#### **Tools Required:**

Slotted screwdriver  
5/16 Drill Bit/Drill  
Tape



#### **Hardware:**

1 Mesh Insert  
3 ½" x ½" L Brackets  
3 6/32 Nylon Lock Nuts

### **Read and understand instructions before attempting installation**


#### **Step 1**

Remove the two-piece plastic cover in front of the radiator support. Remove the clips holding the grille shell in place. Pull up to remove them (1). In each corner is a molded flap that secures the grille shell to the fenders. Pull up and separate the grille shell from the fender (2). This will allow access to the rear of the grille shell.

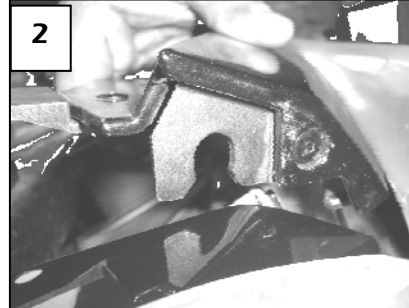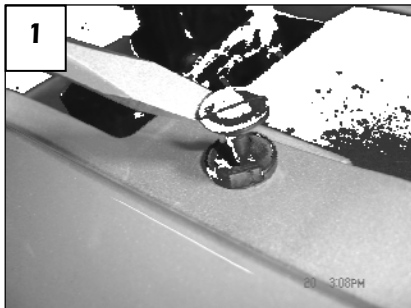

#### **Step 2**

Remove the factory grille inserts. Depress the clips to remove the inserts. Pull the inserts out of the bumper opening. There are 16 tabs that hold the factory inserts in place. Center the lower grille shell in place. From behind; place an L-Bracket and nylon lock nut on each stud (3). Center the grille and tighten.

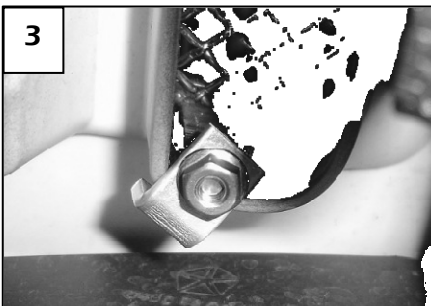

#### **Step 3**

Clip the grille shell back into the fender mounts. Replace all of the clips and reinstall the motor covers.

***Thank you for purchasing a T-Rex Billet Grille. 2/20/08***

