

T-REX

GRILLES



LASER BILLET MAIN GRILLE

MAIN GRILLE - #6211270 / #6211271

2016-2017 CHEVROLET SILVERADO

GRILLE REMOVAL & GRILLE INSTALLATION GUIDE

PARTS INCLUDED

(1) 2 Piece Main Grille Overlay

Polished - Part #6211270 OR
Black - Part #6211271

HARDWARE INCLUDED

(7) #8 x 3" Flat Head Phillips Sheet Metal
Screws - Stainless Steel

(7) #8 U Nut

(7) Bracket Mounts

* Image of Hardware



TOOLS REQUIRED

- Drill
- 1/8" Drill Bit
- Screwdriver set (Phillips)
- Needle Nose Pliers
- Socket Set
- Ratchet Tool
- 1/2" Plastic Spatula

START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION.
Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model.

* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.
* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR GRILL.

STEP 1 FRONT BUMPER REMOVAL

1) Turn off engine and chalk tires with stop block. Open Hood. Disconnect Battery.

PRO TIP:

Before you begin, use "3M Painters Tape" to apply a protective guard around the work areas. Attend to the fender and bumper valance. This will help protect the paint and finish of your vehicle.

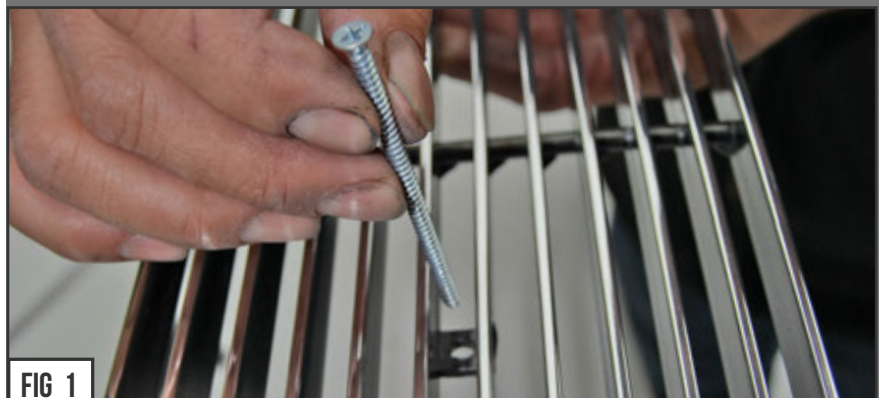


FIG 1

STEP 2

2) Begin by assembling your provided hardware. Mate the Flat Nut Plates to the Bracket Mounts.

Insert a screw into each mounting point.



FIG 2

LASER BILLET MAIN GRILLE

MAIN GRILLE - #6211270 / #6211271

2016-2017 CHEVROLET SILVERADO

GRILLE INSTALL - CONTINUED



FIG 3

STEP 3

SEE FIGURES 2 - 4

3) Pay attention to the orientation of the mounts so that it appears like in the images. (Fig 2-4)



FIG 4



FIG 5

STEP 4

SEE FIGURES 5 & 6

4) At this point, you are now ready to install the billet overlay. With both hands, position the overlay grille piece over the opening, and fit it into place. Once you are satisfied with the gaps and alignment, and then press the screw / bracket assembly so that the brackets slide through the factory grille mesh openings.

STEP 5

5) Looking through the grille overlay, rotate the brackets so they are vertical and then screw down and tighten till overlay is secure.



FIG 6



FIG 7

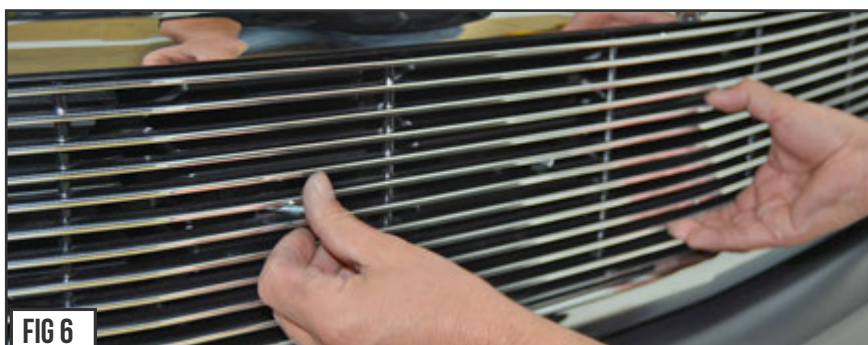


FIG 6



FIG 8

LASER BILLET MAIN GRILLE

MAIN GRILLE - #6211270 / #6211271

2016-2017 CHEVROLET SILVERADO

GRILLE INSTALL - CONTINUED



STEP 6

SEE FIGURES 9 & 10

6) For the second piece of the billet grille overlay, repeat steps Four and Five.



STEP 7

SEE FIGURES 9 & 10

7) With both hands, overlay the grille and fit it into place.



STEP 8

SEE FIGURES 11 - 13

8) Once you are satisfied with the gaps and alignment, press the screw / bracket assembly so that the brackets slide through the factory grille mesh openings.

STEP 9

SEE FIGURES 11 - 13


9) Looking through the grille overlay, rotate the brackets so they are vertical and then screw down and tighten till overlay is secure.

STEPS 10 - PRO TIP

SEE FIGURES 14

10) If you having trouble aligning the bracket to rotate vertically and grab the factory grille opening mesh design, stick a second screwdriver through to help position the bracket into place while tightening down.

INSTALLER'S PRO TIP

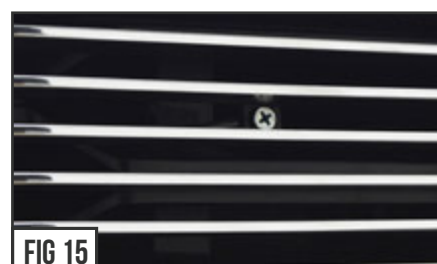

GRILLE SHELL DISASSEMBLY PROCESS CONTINUED

LASER BILLET MAIN GRILLE

MAIN GRILLE - #6211270 / #6211271

2016-2017 CHEVROLET SILVERADO

GRILLE INSTALL - CONTINUED



FIG 16



FIG 17

STEP 11

SEE FIGURES 16 & 17

11) At this point you want to look over your work and examine the gap alignments around all edges and in between the new T-REX Grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can loosen & remove the hardware mounts and shift side to side or up & down to achieve proper look.

GRILLE INSTALL - COMPLETE



FIG 18