

**20442  
20442B  
11-14 DODGE  
CHARGER**



**20442  
20442B  
11-14 DODGE  
CHARGER**

**11-14 DODGE CHARGER**  
**Billet Grille 1 Pc with Polished Frame**

**TOOLS REQUIRED:**

Flathead Screwdriver  
Plastic Prybar  
Socket & Ratchet Set

**PARTS LIST:**

(4) 10/32 Nylon Lock Nuts (1) Billet Grille  
(4) Fender Flatwashers (4) Flange Brackets  
(4) 6/32 Nylon Lock Nuts

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS  
BEFORE ATTEMPTING INSTALLATION.

**Step 1 Factory Grille Removal**

Remove 2 Plastic Covers above the Factory Grille Shell. (Fig. 1)

Remove 4 Clips along the Factory Grille Shell. (Fig. 2)

Remove 2 Clips along the Fender. (Fig. 3)

Use a Plastic Prybar to separate the Fender Cover from Bumper Shell and  
remove (1) 10mm Bolt. (Fig. 4)

On each end, Clips secure the side bumper, Carefully pull the side bumper  
outward to release clips. (Fig. 5)





Remove 6 Bolts along the bottom of the Bumper Shell. (Fig. 6)

Remove factory grille and bumper (grille and bumper are connected  
together) (Fig. 7)

**Step 2 Grille Removal**

Remove 6 Screws from around the Factory Grille and 1 Screw on the  
Bumper Support. (Fig. 8)

Remove Bumper Support. (Fig. 9)

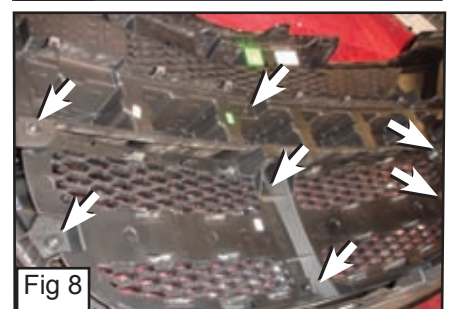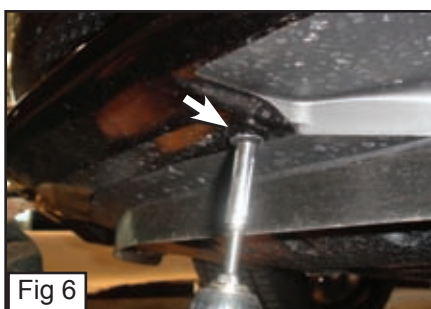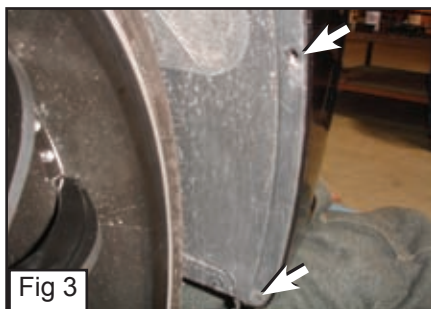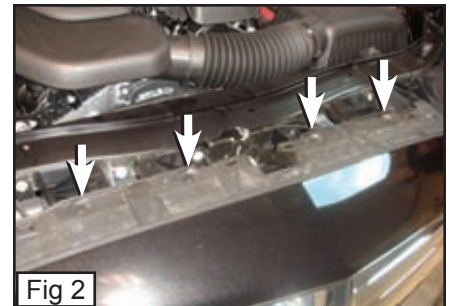

20442  
20442B



20442  
20442B

## DODGE CHARGER

### Billet Grille 1 Pc with Polished Frame

Unclip 16 clips from around the Factory Grille. (Fig. 10)

Remove Factory Grille. (Fig. 11)

Unclip 8 Clips from around the OE Grille Shell and remove (OE Grille Shell will come out from front. (Fig. 12)

Unclip the Dodge Logo on the Factory Grille.

#### Step 3 Grille Installation

Place the Billet Grille onto the Factory Shell. (Fig.13)


On the 4 Short Screws on the Billet Grille, Insert Flange Brackets so it latches onto the Factory Grille Shell and thread a 6/32 Nylon Lock Nut in place. (Fig. 14 & 15)

Place back the Factory Grille over the Billet Grille. (Fig. 16)

Place 4 Fender Flatwashers Around the Threaded Screws on the Billet Grille and Thread 10/32 Nylon Lock Nuts in Place. (Fig. 17)

Place back the Bumper Filler and re-install the 3 Screws along the bottom of the Factory Grille.

Re-Assemble Grille Shell, Bolts and Clips back in.

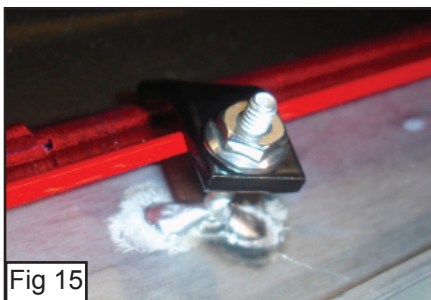

#### Installation Complete