

T-REX

Billet Grilles

20564

2008-2010 FORD

SUPER DUTY

20564

2008-2010 FORD

SUPER DUTY

FORD SUPER DUTY

SIDE VENT INSERT – 2 PC

Tools Required:

Slotted Screwdrivers
Masking Tape





Hardware / Parts Included:

2 Billet Inserts (Driver / Passenger)

Read and understand instructions before attempting installation

Step 1

Apply masking tape to the fender (around the factory side vent). Each vent consists of two pieces and is secured by eight metal pressure clips. The area with the F-250 or F-350 script is a separate piece from the lower section. The piece with script must be removed first (1). Use a plastic interior removal tool or slotted screw driver to pry the top assembly from the fender. Then remove the lower assembly.

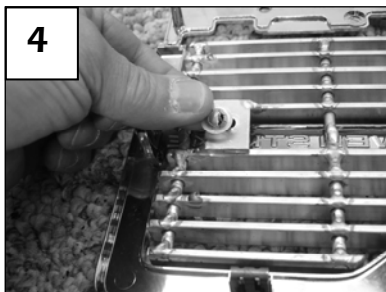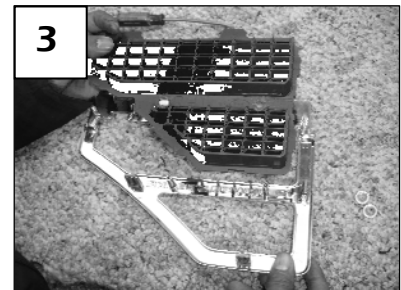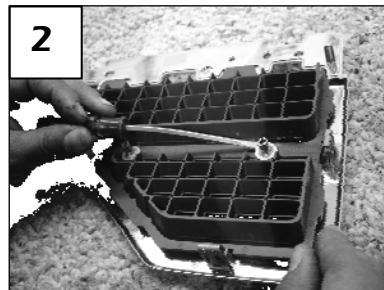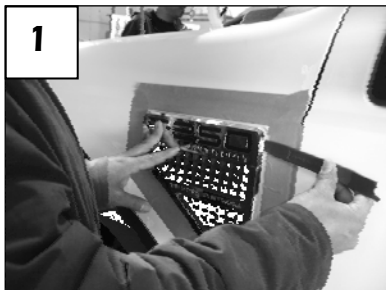

Step 2

Use a small slotted screwdriver to remove the pair of round clips securing the inner mesh to the frame (2). Remove the mesh (3). Center the billet into the frame; use the factory clips to secure the billet (4).

Step 3

Re-install the assemblies onto the vehicle. Install the lower section first; then the upper. **Thank you for purchasing a T-Rex Billet Grille.**