

# 21556 21556B

**04-08 FORD  
F-150 ALL**



# 21556 21556B

**04-08 FORD  
F-150 ALL**

## **2004-2008 Ford F-150 & 05-07 Lincoln LT**



### **Tools Required:**

Needle Nose Pliers  
Phillip & Flat Screw Driver  
Drill & 1/8" Drill Bit  
Socket Set  
Torx Driver  
Black Spray Paint

### **Hardware / Parts Included:**


1	Main Billet Insert (20 Bars)	6	#6 Flat Washers
4	#8 x 3/4 Phillip Screws	2	Brackets
4	#8 Flat Nuts		
6	6-32 x 3/4" Machine Screws		
6	6-32 Nylon Lock Nuts		

## **Read and understand instructions before attempting installation**

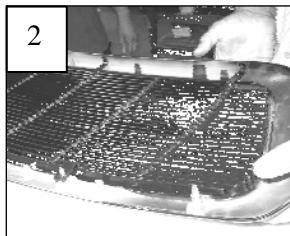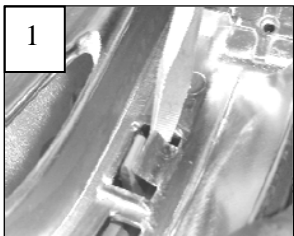



### **Step 1**

Remove the grille shell from the vehicle. Place it face down on a workbench. Now remove the screws holding the metal brackets. Separate the factory plastic grille insert from the outer chrome or painted shell (1). Use a flat head screw driver or pliers to carefully unfasten the molded clips.

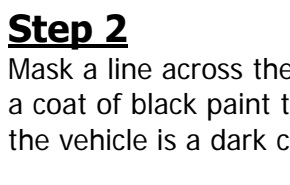


### **Step 2**

Mask a line across the front of the hood just above the grille mounting holes. Apply a coat of black paint to hide the paint that will be visible behind the billet grille. If the vehicle is a dark color skip to Step 3.

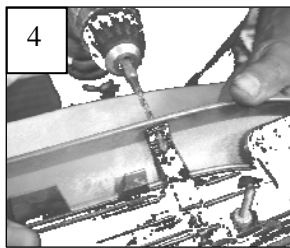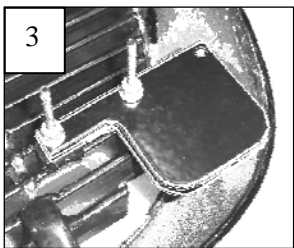

### **Step 3**

Fasten the brackets in each corner as shown (3). Use the machine screws and Nylon lock nuts. Note the eight brackets (four along the top and four along the bottom) welded to the rear of the billet insert. Center the billet into the outer shell (2). Drill a 1/8" hole aligned with the lower mounting tabs (4). Fasten using #8 screws and flat nuts.

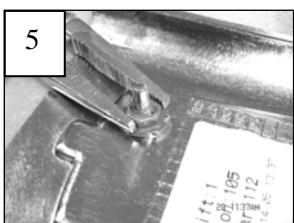


### **Step 4**

If the vehicle is a Lincoln LT, remove the emblem and attach it to the billet grille (5 & 6). Remove the black plastic

inner cover and replace it with the billet mounting plate (p/n 19556 – LT billet mounting plate ***sold separately***).

21556



21556

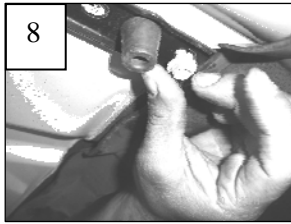


### **Step 5**

It will be helpful to have an assistant to help with the following steps.

Install the grille assembly onto the hood; ***DO NOT TIGHTEN THE HARDWARE AT THIS TIME.*** Thread the nuts by hand onto the mounting studs (7).

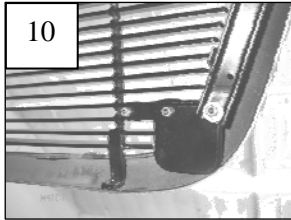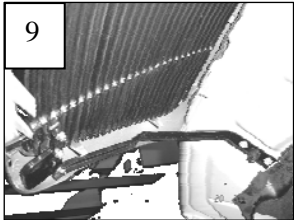


Hold the grille in place; attach the factory metal grille brackets to the grille (9 &10). Fasten the bottom hole to the brackets as shown (10). Tighten the mounting brackets where they attach to the hood.

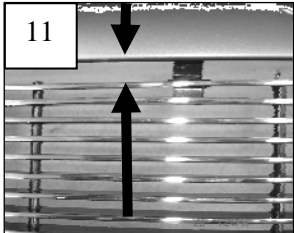

Apply pressure the bottom of the grille and the top; this will close the gap between the top billets (11). Now tighten the nuts in back of the grille along the hood.

Slowly close the hood until it grabs the first lock. Check the alignment of the detent brackets to the rubber hood stops (12). The grille assembly may need more adjustment; loosen the hardware if needed and adjust.

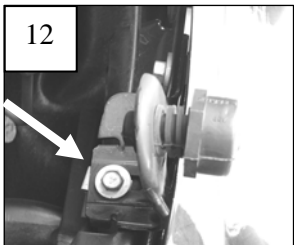

Slowly close the hood all the way. Check to see if the detent brackets contact the hood stops. If not, open the hood and adjust the hood stop by twisting the rubber bushings (12). If more adjustment is needed the location can be adjusted by loosening the retaining bolts holding the brackets (see arrow in picture 12).

***Thank You for purchasing a T-Rex billet grille.***

