

# **T-REX**

## **Billet Grilles**

21662

06-10 FORD  
EXPLORER SPORT  
BILLET INSERT

21662

06-10 FORD  
EXPLORER SPORT  
BILLET INSERT

### **2006-10 FORD EXPLORER SPORT** **BILLET INSERT W/LOGO CUTOUT**



#### **Tools Required:**

Phillips / Slotted Screw Drivers  
5/16" Wrench

#### **Parts List:**

1 Billet Insert (16 Bars)  
4 #8 6Head x 1 1/4" Screws  
4 #8 U Nuts  
4 2" J Hooks

#### **Read and understand instructions before attempting installation**

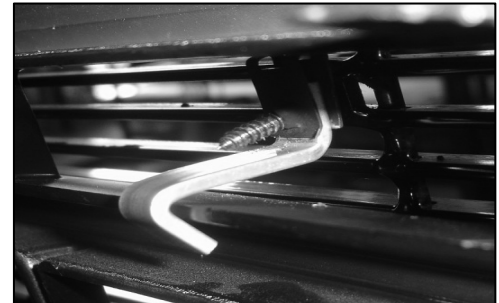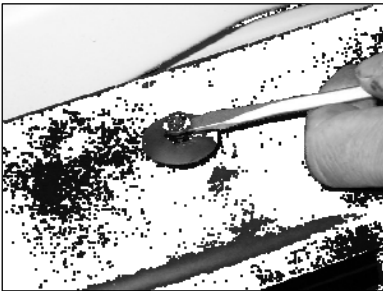

#### **Step 1**

Open the hood and remove the plastic retainers along the top of the grille. This will allow access to the backside of the grille.

#### **Step 2**

Center the billet insert over the factory grille. Install the screws into the tabs welded onto the billet. Slide a U nut onto each J hook onto the flat end. From the backside of the grille; wrap the J hooks around the back of the factory grille bars. Use a Phillips screwdriver to secure the screw to the J hooks. . Do not over-tighten the hardware.



#### **Step 3**

Push the grille shell back into the factory mounting position and re-install the factory grille retainers.  
***Thank you for purchasing a T-Rex billet grille.***  
***7/17/07***