

T-REX

Billet Grilles

25758

09 -14 NISSAN
MAXIMA
BUMPER INSERT

25758

09 -14 NISSAN
MAXIMA
BUMPER INSERT

NISSAN MAXIMA **BUMPER INSERT**

Tools Required:

Phillips Screwdriver


Hardware / Parts Included:

1	Billet Insert	2	2.5" J Hooks
4	#8 x 1.5" Screws (#6 Head)	4	#8 U Nuts
2	1" J Hooks		

Read and understand instructions before attempting installation

Step 1

Open the hood and remove the factory plastic radiator cover. Remove the factory air intake plate on the driver side of the vehicle. Now remove the factory grille shell; release the molded clips along the perimeter of the grille.

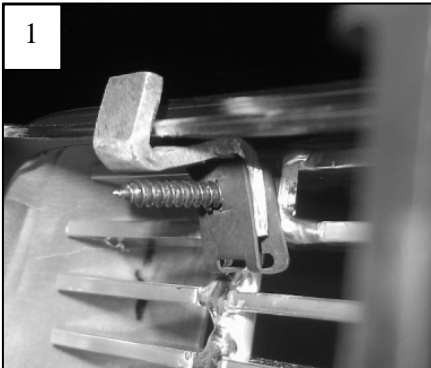

Step 2

Slide the u-nuts onto J hooks. Insert the screws into the tabs on the billet. Start to thread the shorter J hooks onto the top screws (1). Start to thread the longer J hooks onto the lower screws (2). Center the grille in place. Wrap the hooks around plastic bars in the openings. Use a Phillips screwdriver to tighten the hardware. Re-install the grille onto the vehicle.

Thank you for purchasing a T-Rex Billet Grille. 7/24/08

