

51937 54937
2011 TOYOTA
TACOMA



51937 54937
2011 TOYOTA
TACOMA

2011 TOYOTA TACOMA **2 Pc Side Vents**

TOOLS REQUIRED:

Socket & Ratchet Set
Drill & Bits

PARTS LIST

(4) 6/32" Nylon Lock Nuts
(4) 10/32" Washers
(2) Side Vents

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model.



Step 1 Factory Grille Removal

Open the hood and remove the bolts and plastic pop clips along the top of the factory grille shell (Fig 1). Now reach behind the factory grille and unlatch the two latches on the lower back sides with your hands and remove the factory grille shell from the vehicle.



Fig 1

Step 2 Side Vent Installation

Place the grille shell on a workbench. Take one side vent and insert it into the factory grille shell side vent opening and mark where the two threaded studs on the side vent grille contact the factory grille (Fig 2). Drill a small hole (approx 1/4") in the factory grille where you marked the two threaded studs contact (Fig 3). Insert the side vent grille into the factory grille side vent opening, the threaded studs will insert through the holes in the factory grille that you drilled. Install the washers and nylon lock nuts onto the threaded studs and tighten (Fig 4). Repeat this to the other side vent grille. Reinstall the grille onto the vehicle. Installation complete.

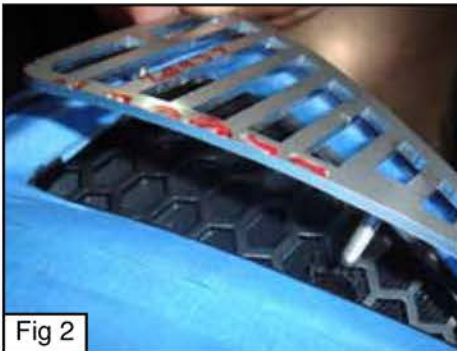


Fig 2

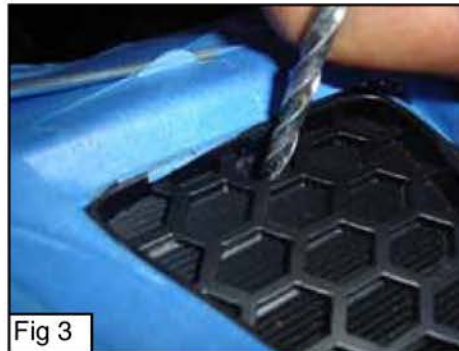


Fig 3



Fig 4